

Handbook




508



Exterior

Keyless Entry and Starting

This system allows you to unlock, lock and start your vehicle while keeping the key on your person and in the defined zone.

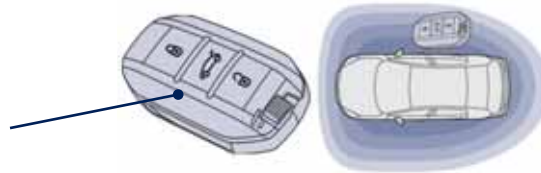


▶ 39, 94



Stop & Start

This system puts the engine temporarily into standby during stops in the traffic (red lights, traffic jams, etc...). The engine restarts automatically as soon as you want to move off. The Stop & Start system reduces fuel consumption and exhaust emissions, and offers the comfort of complete silence when stationary.

▶ 114

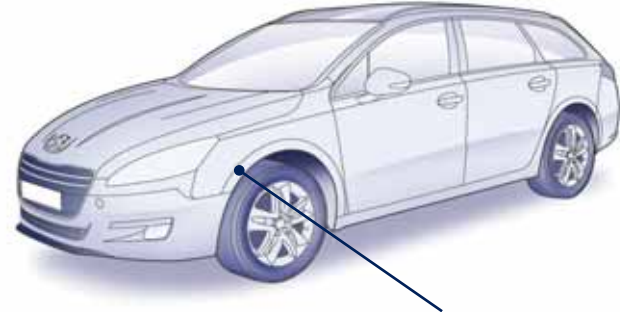

Parking space sensor

This system measures the size of a space and advises whether parking is possible.

▶ 127

Exterior

Front and rear parking sensors

This system provides a warning when manoeuvring forwards and backwards by detecting obstacles located in front of or behind the vehicle.

▶ 125



Motorised tailgate (SW)

This system provides motorised opening and closing of the tailgate, by pressing a button.

▶ 53



Temporary puncture repair kit

This kit is a complete system consisting of a compressor and a sealant cartridge, to allow the temporary repair of a tyre.

▶ 170

Open

Remote control key



- A. Unfolding/Folding the key.
- B. Unlocking the vehicle.



Other functions...

- C. Normal locking of the vehicle.
Vehicle location.

Keyless Entry and Starting system



▶ 39



Unlocking

With the electronic key on your person and in the defined zone, pass your hand behind the door handle to unlock the vehicle, then pull on the handle to open the door.




Locking

With the electronic key in the defined zone, press with a finger on the door handle (at the markings) to lock the vehicle.

Fuel tank



1. Opening the fuel filler flap.

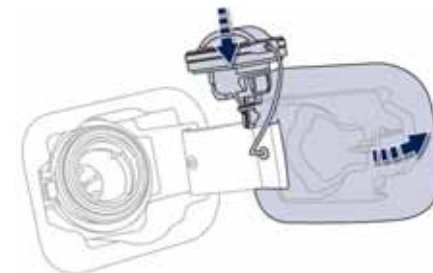

2. Opening and hooking the fuel filler cap.
Tank capacity: approximately 72 litres (or 55 litres according to version).

▶ 58

Interior

Head-up display


This system projects speed and cruise control/speed limiter information onto a lightly smoked strip in the driver's field of vision, so that they do not need to take their eyes off the road.

▶ 118

Interior mood lighting

This subdued passenger compartment lighting improves visibility inside the vehicle in low lighting conditions.

▶ 145

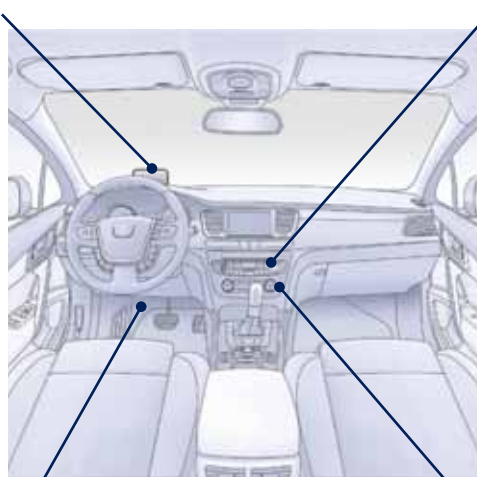

Audio and communication systems

These systems benefit from the latest technology: MP3 compatible audio systems, USB player, Bluetooth hands-free system, satellite navigation system with colour screen, auxiliary inputs, Hi-Fi audio system, ...

Satellite navigation system

▶ 231

Audio system

▶ 285



If your 508 is fitted with a JBL Hi-Fi audio system, this is designed specifically for the passenger compartment of your vehicle.

Digital air conditioning

After setting the desired level of comfort, the system then automatically controls this level according to the exterior climatic conditions.

Manual

▶ 82

Dual-zone

▶ 85, 87

Quad-zone

▶ 87

Switch panels



Lighting of the indicator lamp indicates the state of the corresponding function.



Massage.

▶ 65



Smartbeam.

▶ 135



Parking space sensor.

▶ 127



Alarm.

▶ 48



Electric parking brake.

▶ 96



Starting/stopping using the electronic key.

▶ 94



Opening the boot.

▶ 52, 53



Opening the fuel filler flap.

▶ 58



Deactivation of the ESP/ASR system.

▶ 160



Electric child lock.

▶ 156



Programmable heating warning lamp.

▶ 93



Deactivation of parking sensors.

▶ 126



Deactivation of Stop & Start.

▶ 115



Head-up display (on/off, settings).

▶ 118


Sitting comfortably

Front seats

Manual adjustments

1. Head restraint height and angle adjustment.
2. Backrest angle adjustment.
3. Seat cushion height adjustment.
4. Lumbar support adjustment.
5. Seat forwards-backwards adjustment.
6. Cushion adjustment.

▶ 61

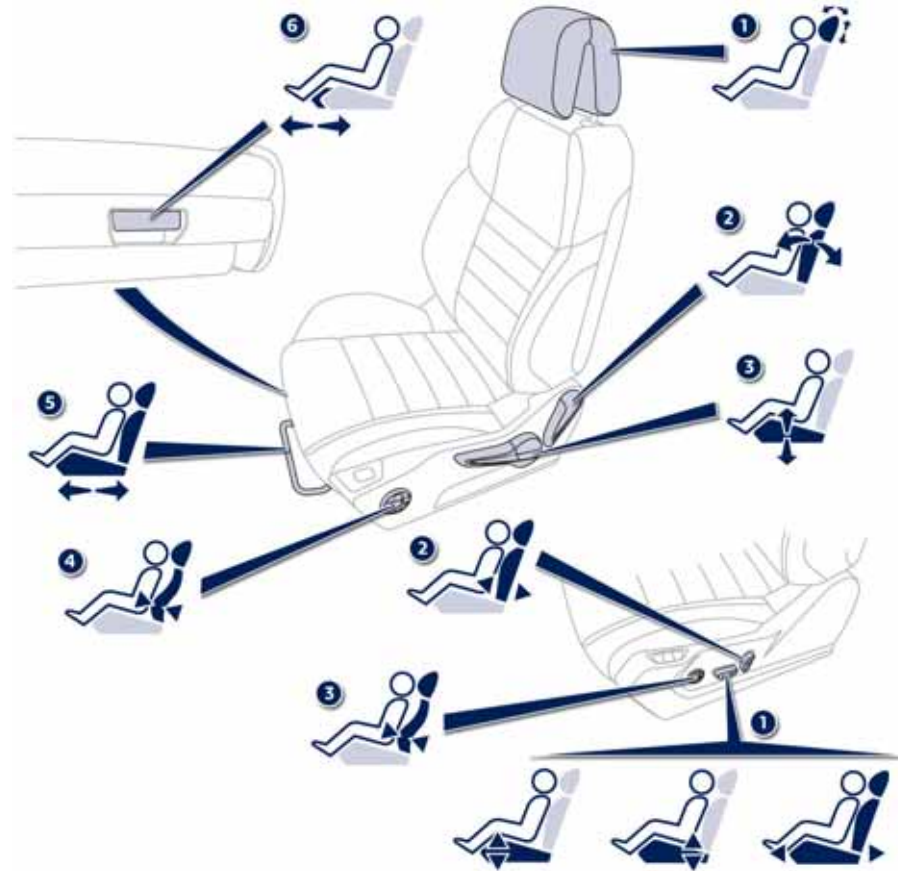


Electrical adjustment

1. Angle, seat height and seat forwards-backwards adjustment.
2. Backrest angle adjustment.
3. Lumbar support adjustment.

▶ 62

Instruments and controls

1. Cruise control/speed limiter controls.
2. Headlamp height adjustment.
3. Lighting and direction indicator stalk.
4. Instrument panel.
5. Driver's airbag.
Horn.
6. Gear lever.
7. 12 V accessory socket
USB port/auxiliary socket.
8. Bonnet release lever.
9. Fusebox.
10. Front door window demisting/defrosting vent.
11. Windscreen demisting/defrosting vent.
12. Steering lock and starting with the key.
13. Starting using the electronic key.
14. Audio equipment steering wheel controls.
15. Wiper/screenwash/trip computer stalk.
16. Central locking and hazard warning buttons.
17. Multifunction screen.
18. Central adjustable air vents.
19. Passenger's airbag.
20. Side adjustable air vents.
21. Glove box/Passenger's airbag deactivation.
22. Electric parking brake.
23. Central armrest with storage.
24. Upper and lower storage.
25. Audio system.
26. Heating/air conditioning controls.

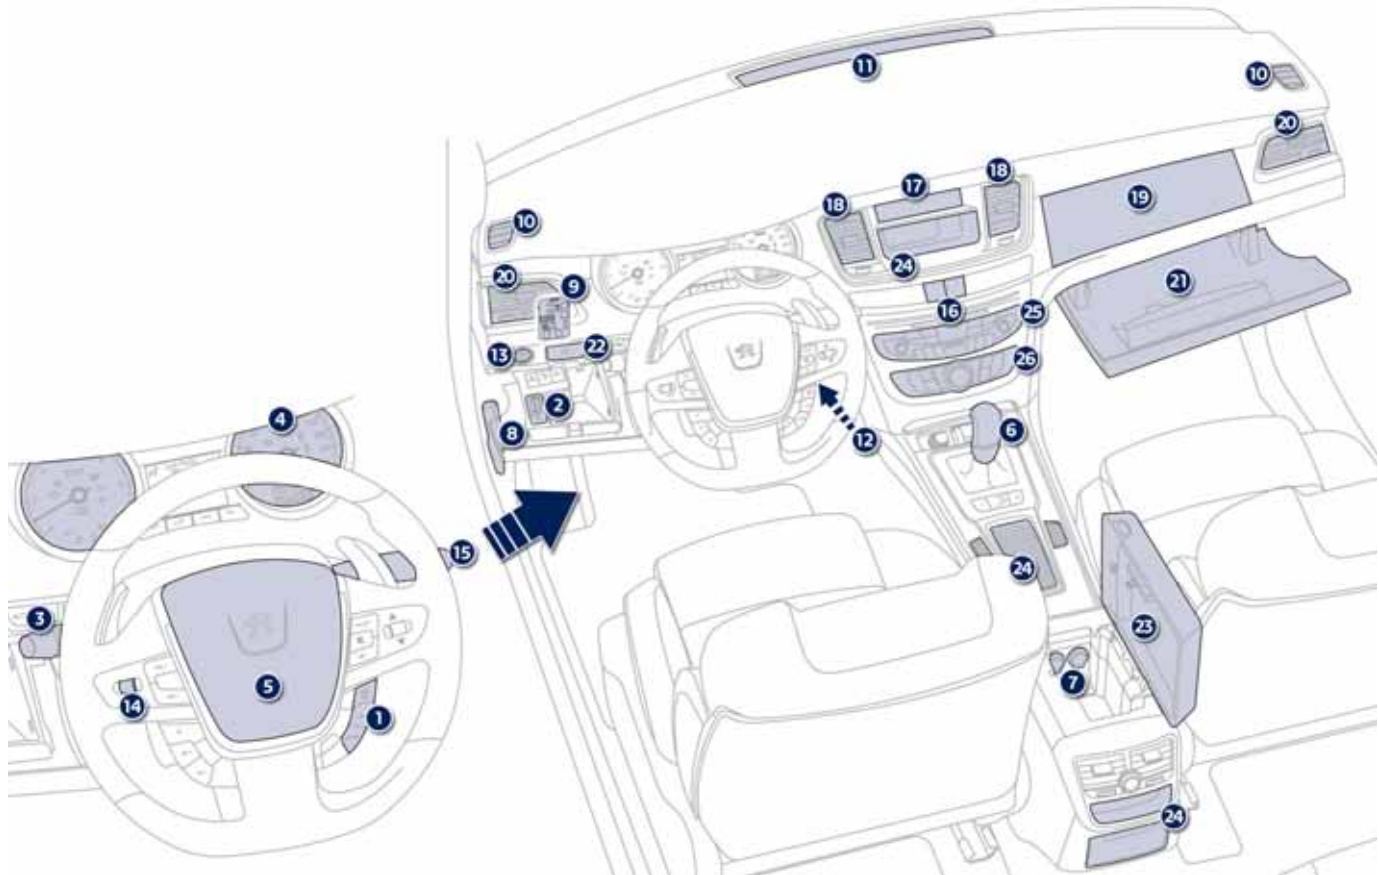

Sitting comfortably


Head restraint adjustment



To lower it, press button **A**.
To raise it, guide the head restraint upwards to the desired position.
To incline it, swivel the lower part backwards or forwards.

▶ 64

Steering wheel adjustment

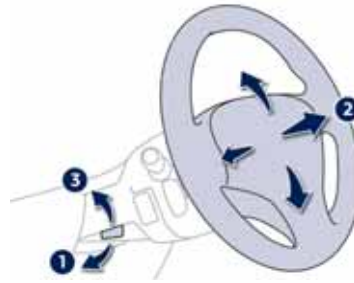

1. Release the adjustment mechanism.
2. Adjust for height and reach.
3. Lock the adjustment mechanism.

! For reasons of safety, these operations must only be carried out with the vehicle stationary.

▶ 70

Heated seats control




- 0: off.
- 1: low.
- 2: medium.
- 3: high.

▶ 64

Sitting comfortably

Door mirrors

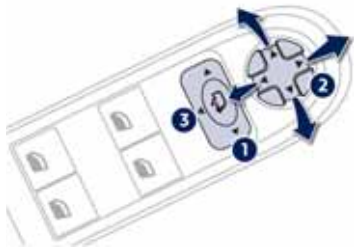


Adjustment

1. Selection of the mirror.
2. Adjusting the position of the mirror glass.
3. Deselection of the mirror.

▶ 68

i Other functions...
Folding/Unfolding.

Rear view mirror

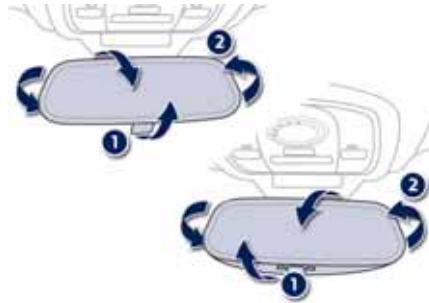

Manual day/night type

1. Selecting the "day" position of the rear view mirror.
2. Rear view mirror adjustment.

Automatic day/night type

1. Automatic detection of day/night mode.
2. Rear view mirror adjustment.

▶ 70

Front seat belts




1. Fitting the belt.
2. Fastening.
3. Check that the belt is correctly fastened by pulling on the belt webbing.

▶ 163

Seeing clearly

Lighting

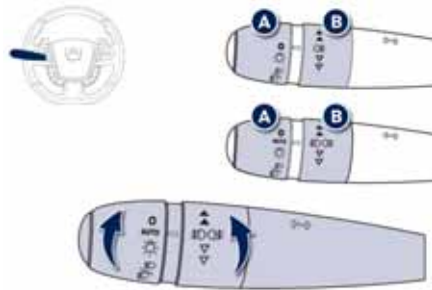


Ring A

- O** Lighting off.
- AUTO** Automatic illumination of headlamps.
- Sidelamps.
- Dipped/main beam headlamps.

Ring B

- Front and rear foglamps.
- ▶ 130**


Wipers

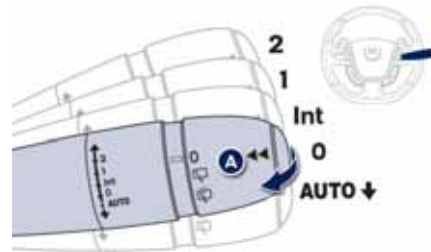

Control stalk A: windscreen wipers

- 2. Fast wipe.
- 1. Normal wipe.
- Int.** Intermittent wipe.
- 0.** Park.
- AUTO** Automatic wiping.
- ↓ Single wipe: Brief pull on the stalk towards you.
- Screenwash: Long pull on stalk towards you.

▶ 140

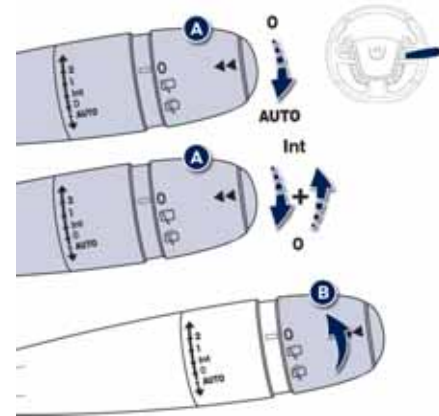

Switching on "AUTO" mode

- Briefly push the stalk downwards.

Switching off "AUTO" mode

- Briefly push the stalk downwards or place the stalk in another position: Int, 1 or 2.

▶ 142














Ring B: rear wiper

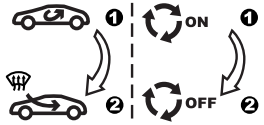- O** Park.
- Intermittent wipe.
- Screenwash.

 ▶ 141

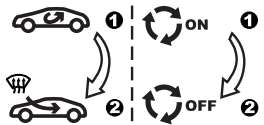Ventilation

Advice on interior settings

I would like...	Heating or manual air conditioning				
	Air distribution	Air flow	Air recirculation/ Exterior air intake	Temperature	Manual A/C
HOT					
COLD					ON
DEMISTING DEFROSTING					ON


Digital air conditioning: use of the fully automatic mode by pressing the "AUTO" button is recommended.

Monitoring Instrument panel



On switching on, the dial needles go to the extent of their travel then return to 0.

- A. With the ignition on, the needle should indicate the fuel remaining.
- B. With the engine running, the associated low level warning lamp should go off.

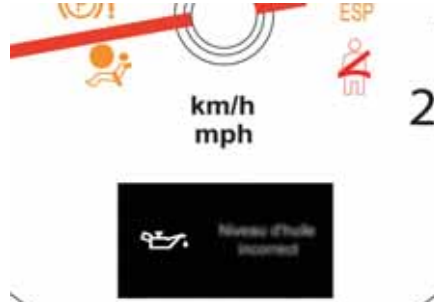

- C. With the ignition on, the instrument panel screen should indicate the level of oil. If the levels are not correct, top up the level which is low.

▶ 35

Warning lamps




1. With the ignition on, the orange and red warning lamps come on.
2. With the engine running, these warning lamps should go off.

If a warning lamp remains on, refer to the page concerned.

▶ 21

Passenger safety


Front passenger's airbag

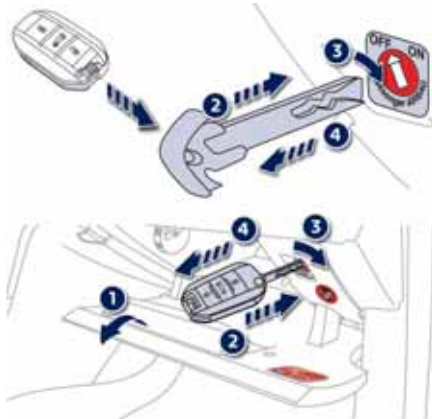

1. Open the glove box.
2. Insert the key.
3. Select position:
"ON" (activation), with front passenger or "forwards facing" child seat,
"OFF" (deactivation), with "rear facing" child seat.
4. Remove the key keeping the switch in the new position.

▶ 167

Front seat belts and passenger's front airbag

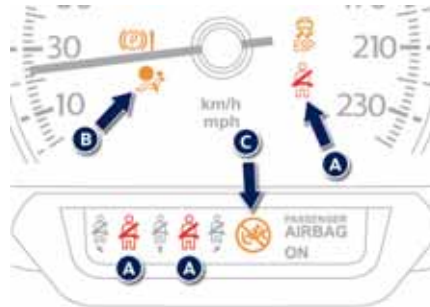

- A. Front seat belts not fastened or unfastened warning lamp.

▶ 164

- B. Front passenger's airbag deactivation indicator lamp.
C. Front passenger's airbag activation indicator lamp.

▶ 167

Driving safely

Stop & Start

Going into engine STOP mode

The "ECO" warning lamp comes on in the instrument panel and the engine goes into standby; with an **electronic gear control gearbox** and speeds below 4 mph (6 km/h), press the brake pedal or put the gear lever in position **N**.

In certain circumstances, the STOP mode may not be available; the "ECO" warning lamp flashes for a few seconds, then goes off.

▶ 114

Going into engine START mode

The "ECO" warning lamp goes off and the engine restarts **with an electronic gear control gearbox**:

- with the gear lever in position **A** or **M** release the brake pedal,
- or with the gear lever in position **N** and brake pedal released, move the gear lever to position **A** or **M**,
- or engage reverse.

In certain circumstances, START mode may be invoked automatically; the "ECO" warning lamp flashes for a few seconds, then goes off.

▶ 115



Deactivation/Reactivation

You can deactivate the system at any time by pressing the "ECO OFF" button; the button's warning lamp comes on.


i The system is automatically reactivated every time the engine is started with the key.

! Before refuelling or doing anything under the bonnet, you must switch off the ignition with the key.

▶ 115

Driving safely

Speed limiter "LIMIT"

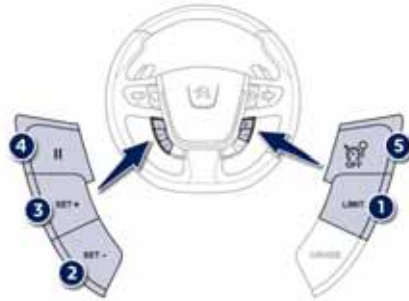


1. Selecting speed limiter mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Pause/resume speed limiter.
5. Speed limiter off.

The values must be set with the engine running.

▶ 121

Cruise control "CRUISE"

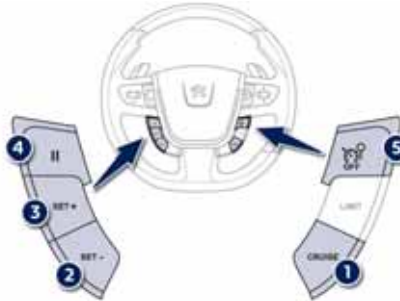

1. Selecting cruise control mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Pause/resume cruise control.
5. Cruise control Off.

In order to be programmed or activated, the vehicle speed must be higher than 25 mph (40 km/h), with at least 4th gear engaged on a manual gearbox (2nd gear on an electronic gear control or automatic gearbox).

▶ 123

Display in the instrument panel



The cruise control or speed limiter mode appears in the instrument panel when it is selected.



Cruise control



Speed limiter