



## SATELLITE NAVIGATION SYSTEM MULTIMEDIA BLUETOOTH TELEPHONE AUDIO SYSTEM

# CONTENTS

<b>01 First steps - Control panel</b>	<b>p.</b>	<b>232</b>
<b>02 Steering mounted controls</b>	<b>p.</b>	<b>234</b>
<b>03 General operation</b>	<b>p.</b>	<b>235</b>
<b>04 Navigation - Guidance</b>	<b>p.</b>	<b>237</b>
<b>05 Traffic information</b>	<b>p.</b>	<b>251</b>
<b>06 Using the telephone</b>	<b>p.</b>	<b>254</b>
<b>07 Contacts - ADDR BOOK</b>	<b>p.</b>	<b>262</b>
<b>08 Radio</b>	<b>p.</b>	<b>265</b>
<b>09 Music media players</b>	<b>p.</b>	<b>268</b>
<b>10 Audio settings</b>	<b>p.</b>	<b>274</b>
<b>11 Configuration</b>	<b>p.</b>	<b>275</b>
<b>12 Screen menu map</b>	<b>p.</b>	<b>276</b>
<b>Frequently asked questions</b>	<b>p.</b>	<b>279</b>



The system is protected in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact a PEUGEOT dealer for configuration of the system.





For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the system switches off following the activation of the energy economy mode.

# 01 FIRST STEPS

## CONTROL PANEL

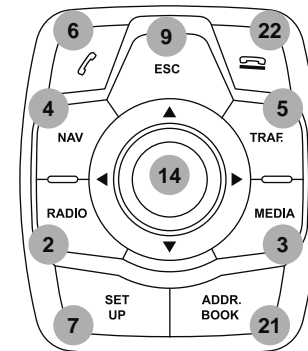
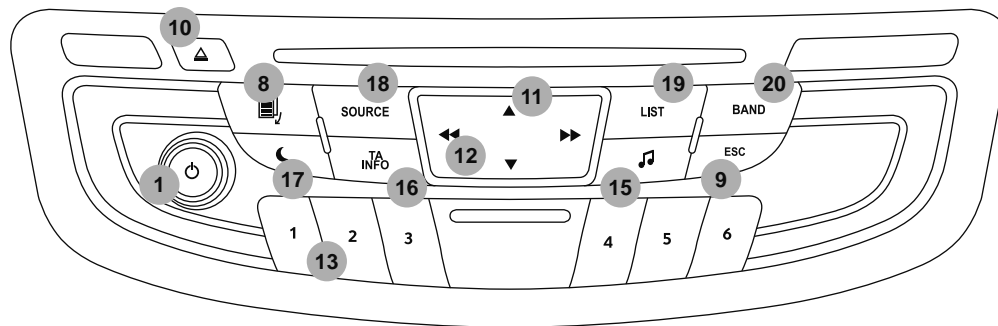


Buttons 2, 3, 4, 5, 6 and 12: selection of the left or right of the screen, when a Menu is displayed in the screen.

# 01 FIRST STEPS

1. Rotary control:
  - Short press engine not running: on/off.
  - Short press engine running: mute on/off.
  - Rotation: volume adjustment (each source is independent, including TA messages and navigation information).
2. Radio source, access to the "**FM/AM band**" menu and display the list of stations.
3. Access to the "**MEDIA**" menu and display the list of tracks.
4. Access to the "**Navigation - guidance**" menu and display the last destinations.
5. Access to the "**Traffic information**" menu and display the current traffic alerts.
6. Access to the "**Telephone**" menu and display the recent calls list.
7. Access to the "**Configuration**" menu.  
Long press: access to the GPS coverage and the navigation demonstration mode.
8. **MODE** button:  
Selection of the type of permanent display.
9. ESC: abandon the operation in progress, up one level in the menu  
Long press: return to permanent display.
10. CD eject  
Continuous press: reinitialisation of the system.
11. According to context:
  - Selection of the previous/next line in a list or menu.
  - Selection of the previous/next media folder.
  - Step by step selection of the previous/next radio frequency.
  - Selection of the next/previous MP3 folder.
  - Move up/down in "**Move the map**" mode.
12. According to context:
  - Automatic selection of the next lower/higher radio frequency
  - Selection of the previous/next CD, MP3 or media track
  - Selection of left/right on the screen when a menu is displayed.
  - Move left/right in "**Move the map**" mode.
13. Buttons 1 to 6:
  - Short press: selection of the stored radio station.
  - Long press: store the current radio station.
14. Dial for selection and OK confirmation  
Selection of an item on the screen or in a list in a menu, then confirmation with a short press.  
Other than for menus and lists, a short press displays a contextual menu depending on the current screen.  
Rotation with map displayed: zoom the map scale in and out.
15. Access to "**Audio settings**": musical ambience, base, treble, loudness, distribution, left/right balance, front/rear balance, automatic volume correction.
16. TA (Traffic Announcement) function On/Off.
17. Display black screen (DARK).
18. Selection of audio source:  
CD, USB, AUX, Bluetooth, Radio.
19. Display the list of stations received, the CD/MP3 tracks or folders.  
Long press: manage the sorting of MP3/WMA files/update the list of stations received.
20. Selection of FM and AM wavebands.
21. Display the list of contacts/Access to the "Directory of contacts" menu.
22. Reject an incoming call or end the call in progress.

## 02 STEERING MOUNTED CONTROLS

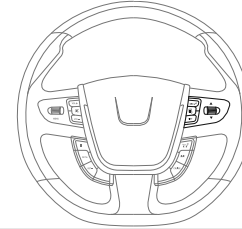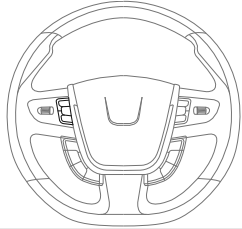

		- Increase volume.
		- Mute/restore sound.
		- Decrease volume.

		<ul style="list-style-type: none"> <li>- Rotation Radio -automatic selection of next/previous frequency. Media: previous/next track.</li> <li>- Press then rotation: access to 6 preset stations.</li> </ul>
		<ul style="list-style-type: none"> <li>- Change the audio source.</li> <li>- TEL button: Accept an incoming call Call in progress: access to telephone menu: hang up, secret mode, hands-free mode.</li> <li>- TEL button (long press): Reject an incoming call or end a call in progress. When not making a call, access to the telephone menu (Dial, Contacts, Calls log, Voice mailbox).</li> </ul>
		- Select the type of permanent display on the screen.
		<ul style="list-style-type: none"> <li>- Radio: display the list of stations. Media: display the list of tracks.</li> </ul>

# 03 GENERAL OPERATION




Press the MODE button several times in succession for access to the following displays:

**RADIO/MEDIA**



**"TELEPHONE"**  
(If conversation in progress)

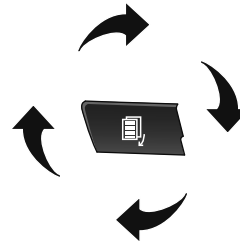

**"FULL SCREEN MAP"**



**"MAP IN WINDOW"**



**SETUP: PARAMETERS**  
date and time, display parameters, sound.



Changing the audio source:  
**RADIO**: radio broadcasts.  
**MUSIC**: playing MEDIA.



For cleaning the screen, the use of a soft, non-abrasive cloth (spectacles cloth) is recommended, with no additional product.



For a detailed global view of the menus available, refer to the "Screen menu map" section.

# 03 GENERAL OPERATION

## DISPLAY ACCORDING TO CONTEXT



A press on the OK dial gives access to short-cut menus according to the display on the screen.

### RADIO:

- 1 Activate/Deactivate TA
- 1 Activate/Deactivate RDS

### TELEPHONE (call in progress):

- 1 Private mode
- 1 Put call on hold
- 1 DTMF ring tones
- 1 Hang up

### MUSIC MEDIA PLAYERS, CD or USB (according to media):

Play modes:

- 1 Normal
- 1 Random
- 1 Random on all media
- 1 Repetition

### FULL SCREEN MAP OR IN A NEW WINDOW:

- 1 Stop/Restore guidance

- 1 Select destination
- 2 Enter an address
- 2 Directory
- 2 GPS coordinates
- 1 Divert route
- 1 Move the map
- 2 Info. on location
- 2 Select as destination
- 2 Select as stage
- 2 Save this place (contacts)
- 2 Quit map mode
- 1 Guidance criteria


# 04 NAVIGATION - GUIDANCE

## Access to the "NAVIGATION" menu



Press NAV.

A long press on the end of the lighting control stalk repeats the last navigation message.

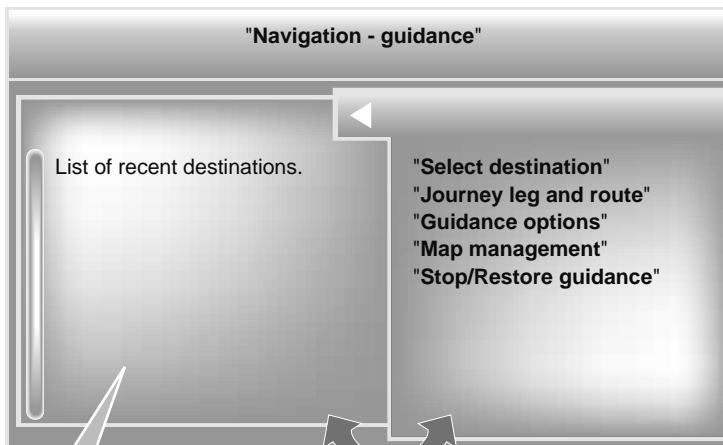

Updates for the mapping are on CD available from PEUGEOT dealers.

To delete the list of recent destinations, select "**Guidance options**" in the navigation menu then select "**Delete last destinations**" and confirm. Select "**Yes**" then confirm. Deleting just one destination is not possible.

Go from the list to the menu (left/right).




 

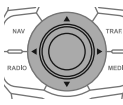

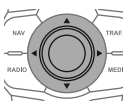

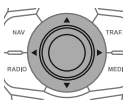

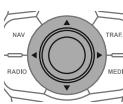
OR




# 04 NAVIGATION - GUIDANCE


## SELECTING A DESTINATION


### TOWARDS A NEW DESTINATION


1	 <p>Press <b>NAV</b> to display the "<b>Navigation - guidance</b>" menu.</p>	
2	 <p>Select "<b>Select destination</b>" and confirm, then select "<b>Enter an address</b>" and confirm.</p>	
3	 <p>Select the "<b>Country</b>" function then confirm.</p>	
4	 <p>Select "<b>Town</b>" function then confirm to enter the destination town.</p>	
5	 <p>Select the letters in the name of the town one at a time, confirming each one with the dial.</p>	


6 Selection the town from the list offered, then confirm  
A pre-set list (by entering the first few letters) of the towns in the country selected can be accessed directly by selecting and confirming **List** on the screen.


7  Turn the dial and select "**OK**" then confirm.

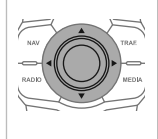



8  If possible, enter the "**Road**" and "**N°/X**" information in the same way.

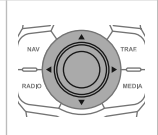


 Select "**Archive**" to save the address entered in a contact file.  
The system allows up to 400 contact files to be recorded.

9  Confirm "**OK**" to start guidance.

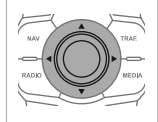

10  Select the guidance criteria: "**Fastest route**", "**Shortest route**" or optimised "**Distance/Time**", then select the desired restriction criteria: "**With tolls**", "**With Ferry**", or "**Traffic info**" then confirm "**OK**".

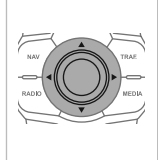

# 04 NAVIGATION - GUIDANCE

## SELECTING A DESTINATION

### TO ONE OF THE RECENT DESTINATIONS

1



 
Press **NAV** twice to open the list of recent destinations.



2



Select the desired destination and confirm to start guidance.



### TOWARDS A CONTACT IN THE CONTACTS DIRECTORY

 
i

Navigation towards a contact imported from your telephone is only possible if the address is compatible with the system.

1




Press **NAV** to display the "**Navigation - guidance**" menu.



2



 
Select "**Select destination**" and confirm, then select "**Directory**" and confirm.



3

 
 

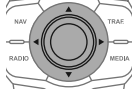

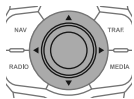


Select the desired destination from your contacts and confirm "**OK**" to start the guidance.


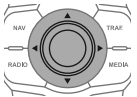

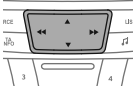

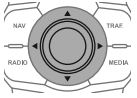

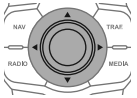


# 04 NAVIGATION - GUIDANCE

## TOWARDS GPS COORDINATES

<p>1</p>  <p>Press NAV to display the "Navigation - guidance" menu.</p>	
<p>2</p>  <p>Select "Select destination" and confirm, then select "GPS coordinates" and confirm.</p>	
<p>3</p>  <p>Enter the GPS coordinates and confirm "OK" to start the guidance.</p>	


 




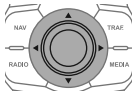

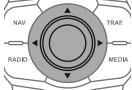

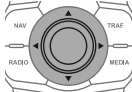
## TOWARDS A POINT ON THE MAP

<p>1</p>  <p>With the map displayed, press OK to display the contextual menu. Select "Move the map" and confirm.</p>	
<p>2</p>  <p>Move the cursor using the screen navigation buttons &lt;&lt;, &gt;&gt;, ▲, ▼ to identify the desired destination.</p>	
<p>3</p>  <p>Press OK to display the contextual menu for "Move the map" mode.</p>	
<p>4</p>  <p>Select "Select as destination" or "Select as stage" and confirm.</p>	

# 04 NAVIGATION - GUIDANCE

## TOWARDS POINTS OF INTEREST (POI)

The points of interest (POI) indicate all of the service locations in the vicinity (hotels, various businesses, airports...).

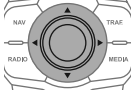











<p><b>1</b></p>  <p>Press <b>NAV</b> to display the "<b>Navigation - guidance</b>" menu.</p>		<p> Select "<b>Search by Name</b>" to search for POIs by name and not by proximity.</p>	
<p><b>2</b></p>  <p>Select the "<b>Enter an address</b>" function and confirm, then select <b>Select destination</b> and confirm.</p>		<p><b>4</b></p>  <p>Search for POIs in the categories suggested in the following pages.</p>	
<p><b>3</b></p>  <p>To select a POI close to your current location, select "<b>POI</b>" and confirm, then select "<b>Around the current place</b>" and confirm.          To select a POI as a stage on the route, select "<b>POI</b>" and confirm, then select "<b>On the route</b>" and confirm.          To select a POI as a destination, first enter the country and town (see "Towards a new destination"), select "<b>POI</b>" and confirm, finally select "<b>Near</b>" and confirm.</p>		<p><b>5</b></p>  <p>Select the POI and confirm "<b>OK</b>" to start the guidance.</p>	













# 04 NAVIGATION - GUIDANCE













This icon appears when several POIs are grouped together in the same area. Zooming in on this icon shows details of the POIs.



## LIST OF PRINCIPAL POINTS OF INTEREST (POI)

-  Service station
-  Garage
-  PEUGEOT
-  Motor racing circuit
-  Covered car park
-  Car park
-  Rest area
-  Hotel
-  Restaurant
-  Cafeteria
-  Bed and breakfast
-  Airport

-  Railway station
-  Bus station
-  Port
-  Industrial estate
-  Supermarket
-  Bank
-  Vending machine
-  Sports complex, sports centre, sports ground
-  Swimming pool
-  Winter sports resort
-  Entertainment, show
-  Cinema

-  Theme parks
-  Hospital, Chemist, Vet
-  Police station
-  School
-  University
-  Town hall
-  Post office
-  Museum, Culture, Theatre, Historic monument
-  Tourist information, Tourist attraction
-  Automatic speed camera\*
-  Red light camera\*
-  Risk area\*

\* According to availability in the country.

## 04 NAVIGATION - GUIDANCE

### UPDATING THE RISK AREAS POIs (speed camera information)

**i** The detailed procedure is available from PEUGEOT dealers.

1



Download the "Risk areas POIs" update file onto a CD ROM or USB memory stick from the Internet. This service is available on <https://www.wipinforadars.fr> or <https://www.peugeot-connect-downloads.co.uk>.

**i** The files must be copied to the root on the chosen medium.

2



Insert the medium (CD ROM or USB memory stick) containing the POI database into the system's CD player or USB port.

The system detects the medium inserted automatically. Confirm the start of the update by validating "YES".

**3** Successful downloading is confirmed by a message.  
The medium used must not contain any other data.

# 04 NAVIGATION - GUIDANCE

## ALERT PARAMETERS RISK AREAS

1



Press **NAV** to display the "Navigation - guidance" menu.

 


These functions are only available if risk areas have been downloaded and installed on the system.

2



Select "**Guidance options**" and confirm, then select "**Set parameters for risk areas**" and confirm.



3

 


Select:

- "Visual alert"
- "Audible alert"
- "Alert only in guidance"
- "Overspeed alarm only".




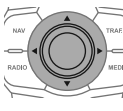

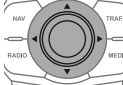

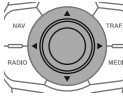
The choice of time of notification defines how long in advance that guidance announcements are given.

Select "**OK**" to confirm the screen.


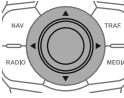

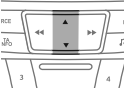

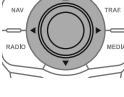



# 04 NAVIGATION - GUIDANCE

## ADDING A STAGE

1	 <p>Press <b>NAV</b> to display the "<b>Navigation - guidance</b>" menu.</p>	
2	 <p>Select "<b>Journey leg and route</b>" then confirm.</p>	
3	 <p>Select "<b>Add a stage</b>" then confirm. The address of the waypoint is entered as a destination, by "<b>Enter an address</b>", a contact in "<b>Directory</b>", ou "<b>Previous destinations</b>".</p>	
4	 <p>Select "<b>Close to</b>" a route passing close to the stage or "<b>Strict</b>" for a route passing through the stage. Confirm "<b>OK</b>" to start the guidance, and give a general indication of the guidance route.</p>	

## ORGANISING STAGES

1	 <p>To organise stages, carry out operations 1 to 2 again, then select "<b>Order/delete journey legs</b>" and confirm.</p>	
2	 <p>Select the stage that you want to move in the order, using the <b>▲</b> and <b>▼</b> buttons until the desired position is reached.</p>	
3	 <p>Select and confirm to save the modifications.</p>	
 <p>Select "<b>Delete</b>" to delete the stage.</p>		

# 04 NAVIGATION - GUIDANCE

 
## ROUTE OPTIONS

### CALCULATION CRITERIA

1




Press **NAV** to display the "Navigation - guidance" menu.



2



 Select "**Guidance options**" and confirm.




3



Select "**Define calculation criteria**" and confirm.

This function allows modification of:

 - the guidance criteria: ("**Fastest route**", "**Shortest route**", "**Distance/Time**"),
- the exclusion criteria: ("**With tolls**" or "**With Ferry**"),
- traffic avoidance: ("**Traffic info**").




i

If traffic avoidance (Traffic info) is selected, the system suggests an alternative route if there is a delay on the guidance route.

 4




 

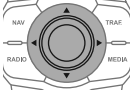

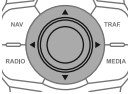




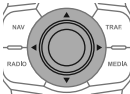
Select "**OK**" and confirm to save the modifications.



# 04 NAVIGATION - GUIDANCE


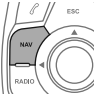

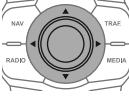

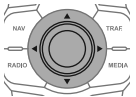




## MAP MANAGEMENT
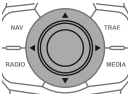
### SELECTING THE POINTS OF INTEREST DISPLAYED ON THE MAP

<p>1</p>  <p>Press <b>NAV</b> to display the "<b>Navigation - guidance</b>" menu.</p>		<p>4</p>  <p>Select from the various categories the ones that you want to display on the screen.</p>	
<p>2</p>  <p>Select "<b>Map management</b>" and confirm.</p>		 <p>Select "<b>By default</b>" to have only "<b>Oil stations, garages</b>" and "<b>Accident-prone area</b>" appear on the map (if installed in the system).</p>	
<p>3</p>  <p>Select "<b>Map details</b>" and confirm.</p>		<p>5</p>  <p>Select "<b>OK</b>" then confirm and select "<b>OK</b>" again then confirm to save the modifications.</p>	

# 04 NAVIGATION - GUIDANCE

## MAP ORIENTATION
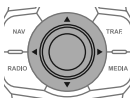
<p>1</p>  <p>Press <b>NAV</b> to display the "Navigation - guidance" menu.</p>		<p>4</p>  <p>Select:</p> <ul style="list-style-type: none"> <li>- "Vehicle direction" to have the map follow the direction of travel,</li> <li>- "North direction" to keep the map always North up,</li> <li>- "Perspective view" to display a perspective view.</li> </ul>	
<p>2</p>  <p>Select "<b>Map management</b>" and confirm.</p>		<p></p> <p>The colour of the map, different from the day and night mode, is configured in the "<b>SETUP</b>" menu.</p>	
<p>3</p>  <p>Select "<b>Map orientation</b>" and confirm.</p>		<p></p> <p>Street names are visible when the map is displayed at the 50 m scale, with either direction of travel or North orientation.</p>	

# 04 NAVIGATION - GUIDANCE

## ADJUSTING THE GUIDANCE SPEECH SYNTHESIS

### ADJUSTING THE VOLUME/DEACTIVATION

The volume setting of guidance messages is also accessible via the "SETUP"/"Voice synthesis" menu.



The volume of messages can be adjusted during the transmission of the message using the volume adjustment control.

1



 
Press **NAV** to display the "Navigation - guidance" menu.



2




Select "**Guidance options**" and confirm.



3



 
Select "**Set speech synthesis**" and confirm.



4



 
Select the volume graph and confirm.



5



 Adjust the volume to the desired level and confirm.




Select "**Deactivate**" to deactivate voice messages.

6



 Select "**OK**" and press the dial to confirm.




# 04 NAVIGATION - GUIDANCE

## MALE VOICE/FEMALE VOICE

1



 
Press **SETUP** to display the configuration menu.



2



 
Select "**Voice synthesis**" and confirm.



3



 Select "**Select male voice**" or "**Select female voice**" then confirm "**Yes**" to activate a male or female voice. The system restarts.



# 05 TRAFFIC INFORMATION

Access to the "TRAFFIC INFORMATION" menu



Press "TRAFFIC"

"Traffic information"

List of TMC messages in order of distance from the vehicle.

"Geographic filter"  
"Select TMC station"  
(automatic, manual)  
"Display/Do not display messages"

Go from the list to the menu (left/right).



OR



# 05 TRAFFIC INFORMATION

 
## CONFIGURE THE FILTERING AND DISPLAY OF TMC MESSAGES

TMC (Traffic Message Channel) messages contain information on traffic and weather conditions, received in real time and transmitted to the driver in the form of audible announcements and symbols on the navigation map. The navigation system can then suggest an alternative route to avoid a traffic problem.

1




Press the **TRAFFIC** button to display the **Traffic information** menu.



2



 Select the **"Geographic filter"** function and confirm.



i

We recommend:

 
- a filter on the route and
- a filter around the vehicle of:
  - 12 miles (20 km) in urban areas,
  - 30 miles (50 km) on motorways.

3



The system offers a choice of:


- **"Retain all the messages:"**,
- or
- **"Retain the messages:"**
  - **"Around the vehicle"**, (confirm the mileage to modify and select the distance),
  - **"On the route"**.



4



 Confirm **"OK"** to save the modifications.



# 05 TRAFFIC INFORMATION

## PRINCIPAL TMC SYMBOLS

1 Black and blue triangle: general information, for example:



2 Red and yellow triangle: traffic information, for example:



 
## RECEIVING TA MESSAGES

! The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

1




Press **RADIO** to display the "FM/AM band" menu.



2



 
Select "**Guidance options**" then confirm.



3



 Select "**Activate/Deactivate TA**" then confirm.



!


The volume setting for TA messages can be adjusted only during the transmission of this type of alert.

# 06 USING THE TELEPHONE

Access to the "TELEPHONE" menu



Press **PHONE**.

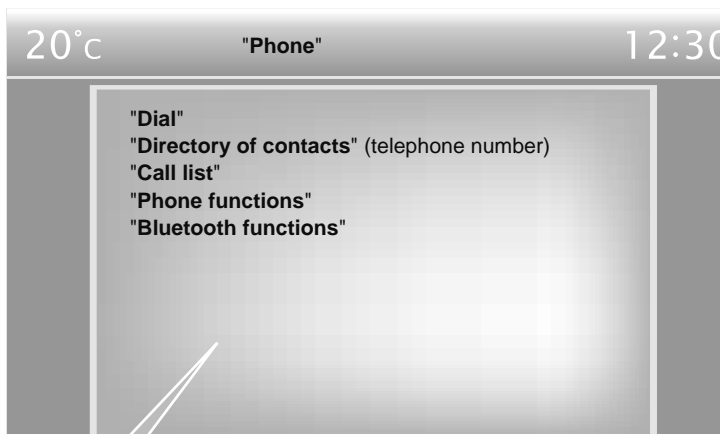

In "**Call list**", select a number in the list and confirm **OK** to start the call.



Calls received.



Calls sent.

In the top bar of the permanent display



No telephone connected.



Telephone connected.



Incoming call.



Outgoing call.



Synchronization of address book in progress.



Telephone call in progress.




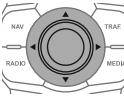



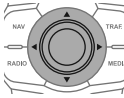

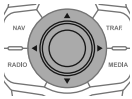

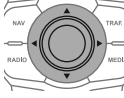


Connecting a different telephone deletes the list of recent calls.

# 06 USING THE TELEPHONE

## PAIRING A TELEPHONE

**!** For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the audio unit must be carried out with the **vehicle stationary**.

<p><b>1</b></p>  <p>Activate the telephone's Bluetooth function and ensure that it is "shown to all" (telephone configuration).</p>		<p><b>4</b></p>  <p>Select "<b>Peripherals search</b>" and confirm. The list of peripherals detected is displayed. Wait until the "<b>Connect</b>" button is available.</p>	
<p><b>2</b></p>  <p>Press <b>PHONE</b>.</p>		<p><b>5</b></p>  <p>Select the name of the desired peripheral from the list of devices detected then select "<b>Connect</b>" and confirm.</p>	
<p><b>3</b></p>  <p>Select "<b>Bluetooth functions</b>" and confirm.</p>		<p><b>6</b></p>  <p>The system offers to connect the telephone:</p> <ul style="list-style-type: none"><li>- in "<b>Hands-free mode</b>" (telephone only),</li><li>- in "<b>Audio</b>" mode (streaming: playing music files on the telephone),</li><li>- or "<b>All</b>" (for selection of both modes).</li></ul> <p>Select "<b>OK</b>" and confirm.</p>	

## 06 USING THE TELEPHONE



The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you.



The "**Hands-free mode**" should be used in preference if "Streaming" is not desired.

 


The ability of the system to connect in only one mode depends on the telephone. The two modes may both connect by default.

7



Select a code for the connection then confirm "**OK**".



8

Enter the same code on the telephone then accept the connection.



Then accept automatic connection on the telephone to allow the telephone to reconnect automatically every time the vehicle is started.






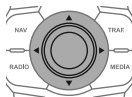

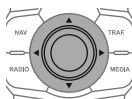
On return to the vehicle, the last telephone connected automatically reconnects, within around 30 seconds after switching on the ignition. (Bluetooth activated and visible). To modify the automatic connection mode, remove the pairing and pair the telephone again with the desired mode.

# 06 USING THE TELEPHONE





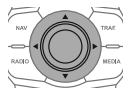

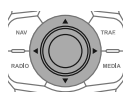



## MAKING A CALL

Use of the telephone is not recommended while driving. We recommended that you park safely or make use of the steering mounted controls.

### CALLING A NEW NUMBER

<p>1</p>  <p>Press <b>PHONE</b>.</p>	
<p>2</p>  <p>Select "<b>Dial</b>" then confirm.</p>	
<p>3</p>  <p>Dial the telephone number using the virtual keypad selecting each number in turn. Confirm "<b>OK</b>" to make the call.</p>	
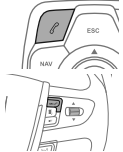
### CALLING A CONTACT
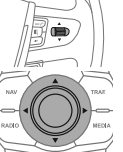
<p>1</p>   <p>Press <b>PHONE</b> or make long press on <b>TEL.</b></p>	
<p>2</p>  <p>Select "<b>Directory of contacts</b>" then confirm.</p>	
<p>3</p>  <p>Select the desired contact and confirm.</p>	
<p>4</p>   <p>Select the number and confirm to start the call.</p>	


# 06 USING THE TELEPHONE

## CALLING A RECENTLY DIALLED NUMBER

1




Press **PHONE** or make a long press on **TEL**, select "**Call list**" and confirm.

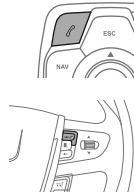

2



 Select the desired number and confirm.



To erase the calls log, press **PHONE**, select "**Phone functions**" and confirm then select "**Delete calls log**" and confirm.

## ENDING A CALL

1



Press **HANG UP**



or  
Or make a long press on the steering mounted **TEL** button.



# 06 USING THE TELEPHONE

## RECEIVING A CALL

 
1

An incoming call is announced by a ring and a superimposed display in the screen.

2




"Yes" to accept the call is selected by default. Press **OK** to accept the call. Select **No** and confirm to reject the call.



 A short press on **TEL** or **PHONE** accepts an incoming call.




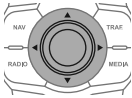

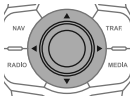

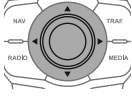

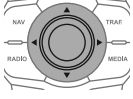

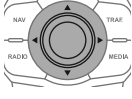



A long press on **TEL** or **PHONE** or a press on **HANG UP** rejects an incoming call.



# 06 USING THE TELEPHONE




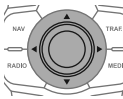

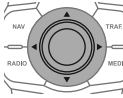
## OPTIONS DURING A CALL\*

<p><b>1</b></p>  <p>During a call, press the <b>MODE</b> button several times to select display of the telephone screen, then press <b>"OK"</b> to open the contextual menu.</p> 	 	<p><b>2c</b></p>  <p>Select <b>"DTMF ring tones"</b> to use the numerical keypad, so as to navigate through the menu of an interactive vocal server.</p> 	
<p><b>2a</b></p>  <p>Select <b>"Private mode"</b> and confirm to take the call on the handset. Or select <b>"Hands-free mode"</b> and confirm to take the call via the vehicle's speakers.</p>		<p><b>2d</b></p>  <p>Select <b>"Hang up"</b> to end the call.</p> 	
<p><b>2b</b></p>  <p>Select <b>"Put call on hold"</b> and confirm to put the current call on hold. Or select <b>"Resume the call"</b> and confirm to resume the call on hold.</p>		<p> it is possible to hold a 3-way conference call by making 2 calls in succession. Select <b>"Conference mode call"</b> in the contextual menu accessible using the <b>TEL</b> button at the steering mounted controls.</p>	




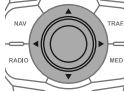

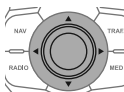

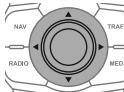

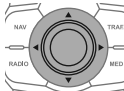
\* Depending on the compatibility of the phone and your service plan.

# 06 USING THE TELEPHONE

## MANAGING PAIRED TELEPHONES

<p>1</p>  <p>Press <b>PHONE</b>.</p>	
<p>2</p>  <p>Select "<b>Bluetooth functions</b>".</p>	
<p>3</p>  <p>Select "<b>List of the paired peripherals</b>" and confirm.</p> <p>It is possible to:</p> <ul style="list-style-type: none"> <li>- "<b>Connect</b>" or "<b>Disconnect</b>" the selected telephone,</li> <li>- delete the pairing of the selected telephone.</li> </ul> <p>It is also possible to select all pairings.</p>	

## CHANGING THE RING TONE

<p>1</p>  <p>Press <b>PHONE</b>.</p>	
<p>2</p>  <p>Select "<b>Phone functions</b>" and confirm.</p>	
<p>3</p>  <p>Select "<b>Ring options</b>" and confirm.</p>	
<p>4</p>  <p>You can adjust the volume and the ring tone used.</p>	
<p>5</p>  <p>Select "<b>OK</b>" and confirm to save the changes.</p>	

# 07 DIRECTORY - ADDR BOOK

Access to the "CONTACTS" menu



Press ADDR BOOK.



The sorting of the list of contacts depends on the telephone used.

"Directory of contacts"

List of contacts.

"Display contacts" ("Open", "Import", "Delete")  
"New contact"  
"Configuration" ("Delete all contacts", "Import all the entries", "Synchronization options").  
"Contact mem. status"  
(up to 400)



Destination:

- from the contacts in the mobile telephone and the SIM card (depending on the synchronization options in the Bluetooth menu and the compatibility of the telephone),
- saved in the system.

Select a contact and confirm.  
Then select "**Guide**" and confirm.




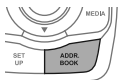
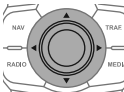

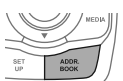

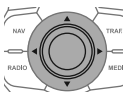

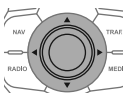

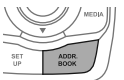
Telephone contacts:

- from the mobile telephone and the SIM card (depending on the synchronization options in the Bluetooth menu and the compatibility of the telephone),
- saved in the system.

Select a telephone contact and confirm to start the call.


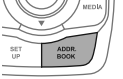

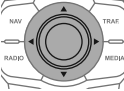

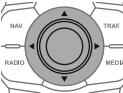

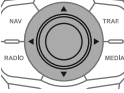

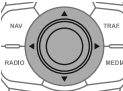



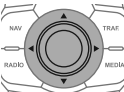

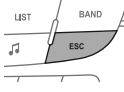
# 07 DIRECTORY - ADDR BOOK

## DIRECTORY/SYNCHRONIZING CONTACTS

<p><b>1</b></p>  <p>Press <b>ADDR BOOK</b> twice then select <b>"New contact"</b> to enter a new contact.</p>		<p><b>2c</b></p> <p>Select <b>"Synchronization options"</b> and confirm:</p> <ul style="list-style-type: none"> <li>- No synchronization: only the contacts saved in the system (always present).</li> <li>- Display telephone contacts: only the contacts saved in the telephone.</li> <li>- Display SIM card contacts: only the contacts saved on the SIM card.</li> <li>- Display all phone contacts: contacts on the SIM card and in the telephone.</li> </ul>	
<p><b>2</b></p>  <p>Press <b>ADDR BOOK</b> twice then select <b>"Configuration"</b> and confirm.</p>			
<p><b>2a</b></p>  <p>Select <b>"Delete all contacts"</b> to delete the contacts saved in the system.</p>			
<p><b>2b</b></p>  <p>Select <b>"Import all the entries"</b> to import all the contacts in the telephone and save them in the system.</p>		<p><b>3</b></p>  <p>Press <b>ADDR BOOK</b> twice then select <b>"Contact mem. status"</b> to see the number of contacts saved in the system or imported, and the free memory.</p>	

# 07 DIRECTORY - ADDR BOOK

## MANAGING CONTACTS

 
<p><b>1</b></p>  <p>Press <b>ADDR BOOK</b> twice then select <b>"Display contacts"</b> and confirm.</p>		<p><b>4</b></p>  <p>Select <b>"Import"</b> to copy one contact to the system.</p>	
<p><b>2</b></p>  <p>Select the desired contact and confirm.</p>		<p><b>5</b></p>  <p>Select <b>"Delete"</b> to delete a contact saved in the system.</p>	
<p><b>3</b></p>  <p>Select <b>"Open"</b> to view an external contact or modify a contact saved in the system.</p>		<p><b>6</b></p>    <p>Select <b>OK</b> or <b>ESC</b> to exit this menu.</p>	
<p><b>i</b></p> <p>It is necessary to import an external contact to modify the record. It will be saved in the system. It is not possible to modify or delete contacts in the telephone or the SIM card via the Bluetooth connection.</p>		 	

# 08 RADIO


## Access to the "RADIO" menu




Press **RADIO**.



A long press on **LIST** refreshes the list of stations received.

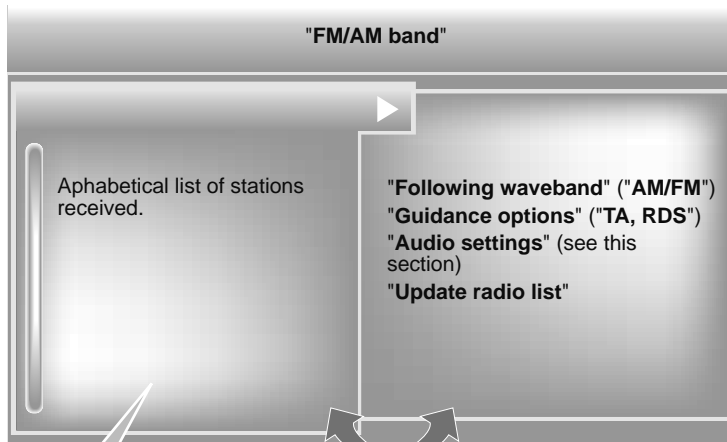

 Press **▲** or **▼** or use the rotary control to select the previous or next station in the list.



This list can also be displayed by pressing **LIST** on the steering mounted controls.

Go from the list to the menu (left/right).



OR



# 08 RADIO

## SELECTING A STATION

## PRESETTING A STATION



The external environment (hill, building, tunnel, underground car park...) may interfere with the reception, including in RDS station tracking mode. This phenomenon is a normal result of the way in which radio waves are transmitted and does not in any way indicate a fault with the audio system.




The quality of reception is represented by this symbol.

1a



### By alphabetical list

Press **RADIO** or **LIST**, select the station of your choice and confirm.

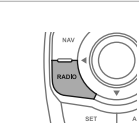


1b



### By automatic frequency search

 Press **◀** or **▶** for the automatic search for a lower or higher radio frequency. Or turn the thumb wheel on the steering mounted control.




1c



### By manual frequency search

 
Press **▲** or **▼** to adjust the radio frequency step by step.



1



 
Press one of the buttons on the numerical keypad for 2 seconds to preset the current station. An audible signal confirms that the station has been preset.



2



 Press the button on the numerical keypad to recall a preset station. Or press then turn the thumb wheel at the steering mounted controls.



# 08 RADIO

## ACTIVATE/DEACTIVATE RDS

 


RDS, if displayed, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

1



Press **RADIO**.




Radio displayed, press "**OK**" to display the contextual menu.

Select "**Activate/Deactivate RDS**".

2



 
Select "**Guidance options**" and confirm.



3



 Select "**Activate/Deactivate RDS**" and confirm.




# 09 MUSIC MEDIA PLAYERS

Access to the "MUSIC MEDIA PLAYER" menu



Press **MUSIC**.

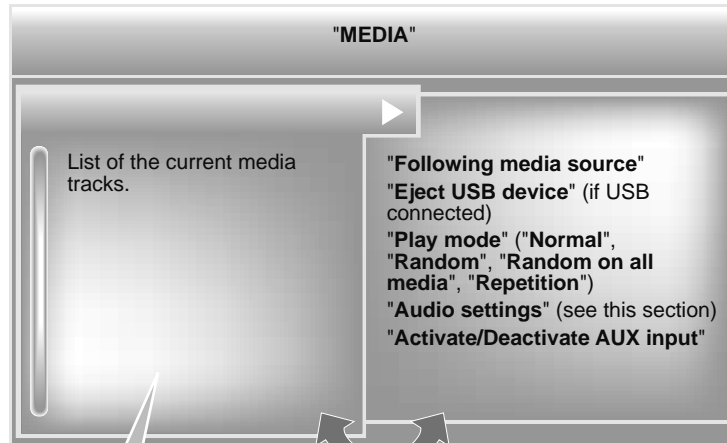

LIST

This list can also be displayed by pressing **LIST** at the steering mounted controls.

Go from the list to the menu (left/right).



or



# 09 MUSIC MEDIA PLAYERS

## CD, MP3 CD/USB PLAYER

### INFORMATION AND ADVICE



The audio equipment will only play audio files with ".m4a, .m4b, .aac, .flac, .ogg and .mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps.  
It also supports the VBR (Variable Bit Rate) mode.  
No other type of file (.wma, .mp4, .m3u...) can be played.  
The sampling rates supported are 11, 22, 44 and 48 KHz.



It is advisable to restrict file names to 20 characters, without using of special characters (e.g. : " " ? ; ù) to avoid any playing and displaying problems.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.  
If the disc is recorded in another format it may not be played correctly.  
It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.  
In the particular case of a multi-session CD, the Joliet standard is recommended.



The system supports USB mass storage or iPod devices via the USB port (suitable cable not supplied).  
Control of the peripheral device is with the audio system controls.  
Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied).



In order to be read, a USB memory stick must be formatted FAT 16 or 32.

# 09 MUSIC MEDIA PLAYERS

## CD, MP3 CD, USB PLAYER




Insert the CD in the player, insert the USB memory stick in the USB player or connect the USB peripheral to the USB port using a suitable cable (not supplied).

The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes.

Reduce the number of non-music files and the number of folders to reduce the waiting time.

The playlists are updated every time the ignition is switched off or connection of a USB memory stick.

Play starts automatically after a period which depends on the capacity of the USB memory stick.

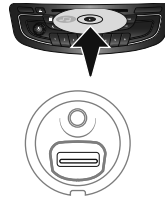

## SELECTION OF SOURCE



 
The **SOURCE** button on the steering mounted controls allows a direct change to the next media source.



1




Press **MUSIC** to display the "**MEDIA**" menu.



2



 Select "**Following media source**" and confirm.













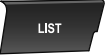

3

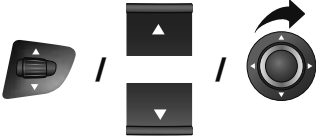Repeat the operation as many times as necessary to obtain the desired media source (except for radio which is accessible either with **SOURCE** or **RADIO**).

# 09 MUSIC MEDIA PLAYERS

## SELECTING A TRACK

Previous track.	 / 	<b>LIST: List of USB or CD tracks or folders</b>	
Next track.	 / 		
Previous folder.		Confirm, next menu level.	
Next folder.			Up one menu level.
Fast forward.	Long press 		
Fast backward.	Long press 		
Pause: long press on <b>SRC</b> .			

# 09 MUSIC MEDIA PLAYERS

## IPOD/IPHONE

1

Connect the iPod or iPhone to the USB port using a suitable cable (not supplied).  
Play starts automatically.

2

Control is via the audio system.

i

The classifications available are those of the portable device connected (artists/albums/genres/playlists/audiobooks/podcasts).  
The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.

## AUDIO STREAMING



Streaming allows audio files on your telephone to be played via the vehicle's speakers.

1

Connect the telephone: see "USING THE TELEPHONE".  
Select "**Audio**" or "**All**" profile.

2

If play does not start automatically, it may be necessary to start the audio playback from the telephone.  
Control is from the peripheral device only.

!

Once connected in streaming mode, the telephone is considered to be a media source.  
It is recommended that you activate "**Repeat**" on the Bluetooth peripheral.

# 09 MUSIC MEDIA PLAYERS

## USING THE AUXILIARY INPUT (AUX)

Cable not supplied

1

 
Connect the portable device (MP3 player...) to the auxiliary JACK socket using an audio cable.



2



Press **MUSIC** to display the "**MEDIA**" menu.




3



Select "**Activate/Deactivate AUX input**" and confirm.

 First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system.



!


Display and management of the controls are via the portable device.

# 10 AUDIO SETTINGS

1



They are accessible by a long press on **RADIO** or **MUSIC** or from the "FM/AM band" or "MEDIA" menus.

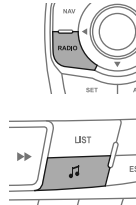

2

- "Equalizer" (choice of 6 musical ambiances)
- "Bass"
- "Treble"
- "Loudness" (Activate/Deactivate)
- "Distribution" ("Driver", "All passengers")
- "Le-Ri balance" (Left/Right)
- "Fr-Re balance" (Front/Rear)
- "Auto. Volume" depending on road speed (Activate/Deactivate)

!

The distribution (or spatialisation) of sound is an audio process that allows the audio quality to be adapted to the number of listeners in the vehicle.

!

The audio settings (**Equalizer**, **Bass**, **Treble** and **Loudness**) are different and independent for each sound source.  
The settings for distribution and balance are common to all sources.


# 11 CONFIGURATION
 
## DISPLAY CONFIGURATION

1




Press **SETUP** to display the "Configuration" menu.



2



 
Select "**Display configuration**" and confirm.



3a



 Select "**Adjust luminosity**" and confirm to adjust the screen brightness. Press "**OK**" to save the changes. The settings for day and night are independent.




3b



Select "**Choose colour**" and confirm to select the screen colour harmony and the map presentation mode:

 - day mode,
- night mode,
- automatic day/night mode, according to whether the headlamps are on.




## SETTING THE DATE AND TIME

1



 
Press **SETUP** to display the "Configuration" menu.



2



 
Select "**Display configuration**" and confirm.



3



 Select "**Set date and time**" and confirm.




Select "**Synchronize the minutes with GPS**" so that setting the minutes is done automatically by satellite reception.


4



 Select the setting to adjust. Confirm by pressing **OK**, then adjust the setting and confirm again to save the modification.



 Adjust the settings one by one. Then select "**OK**" on the screen and confirm to save the settings.



# 12 SCREEN MENU MAP

## MAIN FUNCTION

- 1 OPTION A
  - 2 option A1
  - 3 option A2
- 2 OPTION B...

## "Navigation - guidance" MENU

- 1 Select destination
  - 2 Enter an address
  - 2 Directory
  - 2 GPS coordinates (Archive)
- 1 Journey leg and route
  - 2 Add a stage
    - 3 Enter an address
    - 3 Directory

- 3 Previous destinations
  - 2 Order/delete journey legs
  - 2 Divert route
  - 2 Chosen destination
- 1 Guidance options
  - 2 Define calculation criteria
  - 2 Set speech synthesis
  - 2 Delete last destinations
  - 2 Set parameters for risk areas
- 1 Map management
  - 2 Map orientation
  - 2 Map details
  - 2 Move the map/"Vehicle monitoring"
  - 2 Mapping and updating
  - 2 Description of risk areas database
- 1 Stop/Restore guidance

## "TRAFFIC" MENU

- 1 Geographic filter
  - 2 Retain all the messages:
  - 2 Retain the messages:
    - 3 Around the vehicle
    - 3 On the route
  - 1 Select TMC station
    - 2 Automatic TMC
    - 2 Manual TMC
    - 2 List of TMC stations
  - 1 Display/Do not display messages

# 12 SCREEN MENU MAP

## "Phone" MENU

- 1 Dial
- 1 Directory of contacts
- 1 Call list
- 1 Phone functions
- 2 Ring options
- 2 Delete calls log
- 1 Bluetooth functions
- 2 List of the paired peripherals
  - 3 Connect
  - 3 Disconnect
  - 3 Delete
  - 3 Delete all
- 2 Peripherals search
- 2 Rename radiotelephone

## "Directory of contacts" MENU

- 1 Display contacts
  - 2 Open
  - 2 Import
  - 2 Delete
- 1 New contact
- 1 Configuration
  - 2 Delete all contacts
  - 2 Import all the entries
  - 2 Synchronization options
    - 3 No synchronization
    - 3 Display telephone contacts
    - 3 Display SIM card contacts
    - 3 Display all phone contacts
- 1 Contact mem. status

## "RADIO" MENU

- 1 Following waveband
  - 1 Options
    - 2 Activate/Deactivate TA
    - 2 Activate/Deactivate RDS
  - 1 Audio settings
    - 2 Equalizer
      - 3 None
      - 3 Classical
      - 3 Jazz
      - 3 Rock
      - 3 Techno
      - 3 Vocal

# 12 SCREEN MENU MAP

- 2 Bass
- 2 Treble
- 2 Loudness
- 2 Distribution
- 3 Driver
- 3 All passengers
- 2 Le-Ri balance
- 2 Fr-Re balance
- 2 Auto. Volume
- 1 Update radio list

## "MEDIA" MENU

- 1 Following media source
- 1 Eject USB support
- 1 Read mode
- 2 Normal
- 2 Random
- 2 Random on all media
- 2 Repetition
- 1 Audio settings (same as RADIO)
- 1 Activate/Deactivate AUX input

## "SETUP" MENU

- 1 Display configuration
- 2 Choose colour
- 3 Harmony:
- 3 Cartography:
- 4 Day mode
- 4 Night mode
- 4 Auto Day/Night
- 2 Adjust luminosity
- 2 Set date and time
- 1 Voice synthesis
- 2 Guidance instructions volume
- 2 Select male voice/Select female voice

# FREQUENTLY ASKED QUESTIONS

The following tables groups together the answers to the most frequently asked questions concerning your audio system.

QUESTION	ANSWER	SOLUTION
The route calculation is not successful.	The guidance criteria may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the guidance criteria on the Navigation Menu, "Guidance options"\"Define calculation criteria".
The Accident-prone area POIs do not appear.	The Risk area POIs have not been selected	Select the Accident-prone area POIs in the list of POIs.
	The Risk area POIs have not been downloaded.	Download the Risk area POIs from the PEUGEOT website.
The speed camera audible warning does not work.	The audible warning is not active.	Activate audible warnings in the Guidance options menu, "Navigation - guidance", "Set parameters for risk areas".
The system does not suggest a detour around an incident on the route.	The guidance criteria do not take account of TMC messages.	Select the "Traffic info" function in the list of guidance criteria.
I receive a speed camera alert for a speed camera which is not on my route.	Other than guidance, the system announces all speed cameras positioned in a cone located in front of the vehicle. It may provide an alert for speed cameras located on nearby or parallel roads.	Zoom in on the map to view the exact position of the speed camera. Select "On the route" to no longer receive alerts other than guidance or to reduce the time for the announcement.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (display of the traffic information icons on the map).
	The filters are too restrictive.	Modify the "Geographic filter" settings.
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely. Check that there is a GPS coverage of at least 4 satellites (long press on the SETUP button, then select "GPS coverage").
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the GPS signal reception conditions.
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	<ul style="list-style-type: none"> <li>- Check that your telephone's Bluetooth function is switched on.</li> <li>- Check in the telephone settings that it is "visible to all".</li> </ul>
	The Bluetooth telephone is not compatible with the system.	A list of compatible Bluetooth mobile telephones is available from the dealer network.
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down, ...).

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Some contacts are duplicated in the list.	The options for synchronizing contacts are synchronizing the contacts on the SIM card, the contacts on the telephone, or both . When both synchronizations are selected, some contacts may be duplicated.	Select "Display SIM card contacts" or "Display telephone contacts".
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.
The system does not receive SMS text messages.	The Bluetooth mode does not permit sending SMS text messages to the system.	
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. Le CD has been recorded in a format that is not compatible with the player. The CD is protected by an anti-pirating protection system which is not recognised by the audio system.	<ul style="list-style-type: none"> <li>- Check that the CD is inserted in the player the right way up.</li> <li>- Check the condition of the CD: the CD cannot be played if it is too damaged.</li> <li>- Check the content in the case of a recorded CD: consult the advice in the "Audio" section.</li> <li>- The audio system's CD player does not play DVDs.</li> <li>- Some recorded CDs will not be played by the audio system because they are not of the correct quality.</li> </ul>
There is a long waiting period following the insertion of a CD or connection of a USB memory stick.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take from a few seconds to a few minutes.	This phenomenon is normal.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiances) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
I cannot find some radio stations in the list of stations received.	The station is not received or its name has changed in the list.	
	Some radio stations send other information in place of their name (the title of the song for example).	
The name of the radio station changes.	The system interprets this information as the name of the station.	

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
In changing the setting of treble and bass the equalizer setting is deselected.	The selection of an equalizer setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or equalizer settings to obtain the desired musical ambience.
In changing the equalizer setting, treble and bass return to zero.		
When changing the balance settings, the distribution setting is deselected.	The selection of a distribution setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or distribution settings to obtain the desired musical ambience.
When changing an distribution setting, the balance setting is deselected.		
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings for Volume, Bass, Treble, Equalizer and Loudness can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings for (Volume , Bass, Treble, Equalizer, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Fr-Re balance, Le-Ri balance) to the middle position, select the "None", musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
<p>With the engine off, the system switches off after a few minutes of use.</p>	<p>When the engine is switched off, the system's operating time depends on the battery charge. The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.</p>	<p>Start the vehicle's engine to increase the battery charge.</p>
<p>Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).</p>	<p>Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).</p>	<p>Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick..</p>
<p>When I connect my iPhone as telephone and to the USB port at the same time, I am unable to play the music files.</p>	<p>When the iPhone connects automatically as a telephone, it is possible that it connects streaming and telephone functions simultaneously. The streaming function takes the place of the USB function which is then not useable.</p>	<p>Two possible solutions (depending on the iPhone):</p> <ul style="list-style-type: none"> <li>- disconnect then reconnect the USB connection (the USB function then takes the place of the streaming function),</li> <li>- go to the "Bluetooth functions" \ "List of the paired peripherals" menu, disconnect the iPhone then reconnect it in "Hands-free mode" only.</li> </ul>



## AUDIO SYSTEM/BLUETOOTH



The system is coded in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact your PEUGEOT dealer for configuration of the system.




For safety reasons, the driver must only carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the audio system may switch off after a few minutes.

## CONTENTS



<b>01 First steps</b>	<b>p.</b>	<b>286</b>
<b>02 Steering mounted controls</b>	<b>p.</b>	<b>287</b>
<b>03 Main menu</b>	<b>p.</b>	<b>288</b>
<b>04 Audio</b>	<b>p.</b>	<b>289</b>
<b>05 Using the telephone</b>	<b>p.</b>	<b>299</b>
<b>06 Audio settings</b>	<b>p.</b>	<b>308</b>
<b>07 Configuration</b>	<b>p.</b>	<b>309</b>
<b>08 Trip computer</b>	<b>p.</b>	<b>310</b>
<b>09 Screen menu map</b>	<b>p.</b>	<b>311</b>
<b>Frequently asked questions</b>	<b>p.</b>	<b>313</b>

# 01 FIRST STEPS

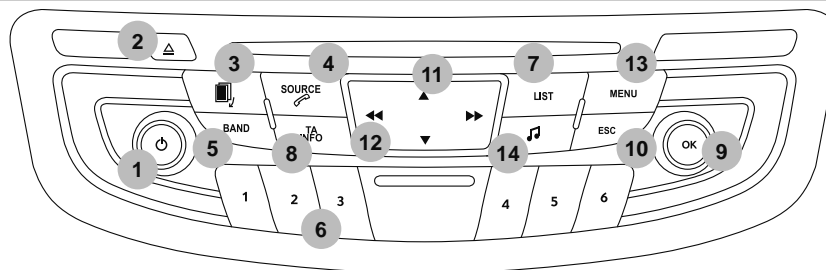

1. On/Off and volume adjustment.
2. CD eject.
3. Selection of the display on the screen from the following modes:  
Full screen: Audio (or if a telephone call is in progress)/  
New window: Audio (or telephone if a call is in progress) - Time or  
Trip computer  
Long press: black screen (DARK).
4. Selection of source:  
Radio, CD, AUX, USB, Streaming.  
Accept an incoming call.
5. Selection of FM1, FM2, DAB and AM wavebands.
6. Buttons 1 to 6:  
Selection of a preset radio station.  
Long press: preset a station.
7. Display the list of stations received, the CD/MP3 tracks or folders.  
Long press: MP3/WMA file order/update the list of stations received.
8. TA (Traffic Announcement) function on/off.  
Long press: access to the type of information.
9. Confirmation or display of contextual menu.
10. Abandon current operation  
Up one level (menu or folder).
11. Automatic search for a lower/higher radio frequency.  
Selection of previous/next CD, USB, streaming track.  
Navigation in a list.
12. Manual step by step search for a lower/higher radio frequency.  
Selection of the previous/next MP3 folder.  
Selection of the previous/next USB device folder/genre/artist/playlist.  
Navigation in a list.
13. Main menu.
14. Audio settings:  
equalizer, treble, bass, loudness, distribution, left/right balance, front/rear, automatic volume.

## 02 STEERING MOUNTED CONTROLS

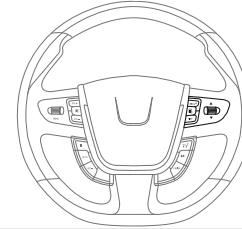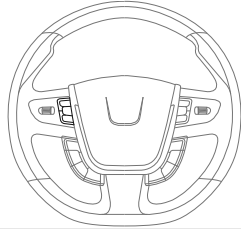

		- Increase volume.
		- Mute/restore sound.
		- Decrease volume.


		<ul style="list-style-type: none"> <li>- Rotation: Radio: access to 6 preset stations: previous/next. Media: previous/next track. Press: confirmation.</li> </ul>
		<ul style="list-style-type: none"> <li>- Change the audio source. Long press: mute.</li> <li>- Accept an incoming call.</li> <li>- Access to the Telephone menu if a call is in progress.</li> <li>- Long press: reject an incoming call or end a call in progress.</li> <li>- Long press: access to the "Telephone" menu if no call in progress.</li> </ul>
		<ul style="list-style-type: none"> <li>- Select the type of permanent display on the screen between window and full screen modes.</li> <li>- Long press: black screen (DARK).</li> </ul>
		<ul style="list-style-type: none"> <li>- Radio: display the list of stations. Media: display the list of tracks. Long press: update the list of stations received.</li> </ul>

# 03 MAIN MENU

> SCREEN C

**"Multimedia"**: Media parameters, Radio parameters.

**"Bluetooth connection"**: Connections management, Search for a device.

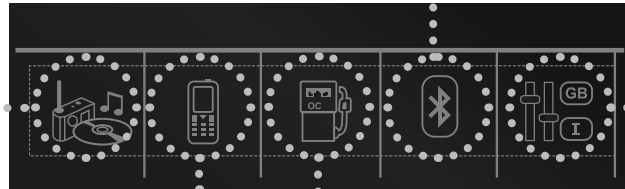

**"Telephone"**: Call, Directory management, Telephone management, Hang up.

**"Trip computer"**: Warning log.

**"Personalisation-configuration"**: Define the vehicle parameters, Choice of language, Display configuration, Choice of units, Date and time adjustment.



For a detailed global view of the menus available, refer to "Screen menu maps" in this section.

# 04 AUDIO

## RADIO


### SELECTING A STATION

**i** The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS station tracking mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.

1





Press **SOURCE** several times in succession and select radio.

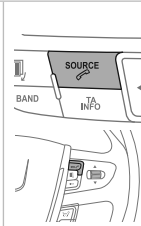


2



  
Press **BAND** to select a waveband among: FM1, FM2, DAB (digital radio), AM.



 
Press **LIST** to display the list of stations received in alphabetical order.



 Select the desired radio source station and confirm by pressing **OK**.



 
A press changes to the next or previous letter (e.g. A, B, D, F, G, J, K, ...).



1



 
A long press on **LIST** builds or updates the list of stations; audio reception is cut momentarily.





# 04 AUDIO


## RDS

**i** RDS, if displayed, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

 **1**  When the radio is displayed on the screen, press **OK** to display the contextual menu.



 **2**  Select "RDS" or "DAB/FM auto tracking" and confirm to save. "RDS" or "DAB/FM" is displayed on the screen.




## DIGITAL RADIO - DAB/FM AUTO TRACKING

**i** DAB/FM auto tracking allows you to continue listening to the same station, by temporarily switching to the equivalent analogue station until the digital signal is stable again.

## RECEIVING TA MESSAGES


**i** The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

  
**1**  Press **TA INFO** to activate or deactivate the reception of traffic messages.




 
## DIGITAL RADIO - LISTENING TO INFO MESSAGES

**i** The INFO function gives priority to TA alert messages. To be active, this function needs good reception of a radio station that transmits this type of message. When a message is transmitted, the current audio source (Radio, CD, USB,...) is interrupted automatically to receive the INFO message. Normal play resumes at the end of the message transmission.

**1**  Make a long press on **TA INFO** to display the list of categories.



**2**  Select or deselect categories to activate or deactivate the reception of the corresponding messages.



# 04 AUDIO

## DISPLAY RADIO TEXT



 
Radio text is information transmitted by the radio station related to the current programme or song.

### Screen C

1




With the radio displayed on the screen, press **OK** to display the contextual menu.



2



 Select "**RadioText (TXT) display**" and confirm **OK** to save.



# 04 AUDIO

## AUDIO CD

### PLAYING A CD




Insert 12 cm diameter circular compact discs only.  
Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the original player.  
Without pressing the **EJECT** button, insert a CD in the player, play begins automatically.

1




To play a disc which has already been inserted, press the **SOURCE** button several times in succession and select "CD".

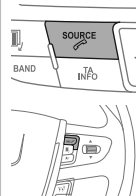

2



 
Press one of the buttons to select a track on the CD.



!



 
Press **LIST** to display the list of tracks on the CD.



3



 Press and hold one of the buttons for fast forward or backward.



# 04 AUDIO

## CD, USB

### INFORMATION AND ADVICE



The audio system will only play files with extension ".mp3" or ".wma" and a compression rate that is constant or variable between 32 Kbps and 320 Kbps.



It is advisable to restrict file names to 20 characters without using special characters (e.g. " ?; ù) to avoid any playing or displaying problems.



The playlists accepted are types .m3u and .pls.  
The number of files is limited to 5 000 in 500 directories on a maximum of 8 levels.



On a single disc, the CD player can read up to 255 MP3 files spread over 8 directory levels. However, it is recommended that this be kept to 2 levels so as to limit the time taken to access and play the CD. During play, the folder structure is not observed.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select standards ISO 9660 level 1.2 or Joliet. If the disc is recorded in another format, it may not be played correctly. It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality. In the particular case of a multi-session CD, the Joliet standard is recommended.




Do not connect a hard disk or USB device other than audio players to the USB port. This may cause damage to your installation.


# 04 AUDIO



## CD, USB


### PLAYING A COMPILATION


**!**  Insert an MP3 compilation in the CD player or connect a memory stick to the USB port, directly or via an extension lead.


**💡** The system creates playlists (temporary memory) the creation time for which can take from a few seconds to several minutes. The playlists are updated every time the ignition is switched off or a USB memory stick is connected. Play starts automatically after a period which depends on the capacity of the USB memory stick.


 At a first connection, the order suggested is by folder. When connecting again, the order previously chosen is retained.

 
**1**   To play a disc or memory stick which has already been inserted, press **SOURCE** several times in succession and select "CD" or "USB".

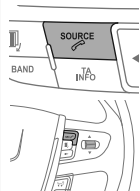


 
**2**  Press one of the buttons to select the next or previous track.

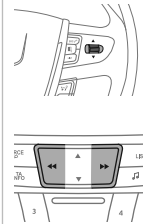


 
**3**  Press one of the buttons to select the next or previous folder in the order chosen.






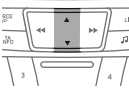





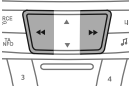
**4**  Press and hold one of the buttons for fast forwards or backwards.



 



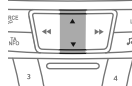

**5**  Press **LIST** to display the menu of folders in the compilation.



# 04 AUDIO

<p>6</p>  <p>Select a line in the list.</p> 	 
<p>7</p>  <p>Select a track or a folder.</p>	
<p>8</p>  <p>Up a level in the menu.</p>	
<p>9</p>  <p>Jump a page.</p>	

## USB MEMORY STICK - FILE CLASSIFICATION

<p>1</p>  <p>Make a long press on <b>LIST</b> or press <b>MENU</b>, select "<b>Multimedia</b>", then "<b>Media parameters</b>" and finally "<b>Choice of track listing</b>" to display the different classifications.</p>	
<p>2</p>  <p>Having selected the desired classification ("<b>By folders</b>", "<b>By artists</b>", "<b>By genres</b>", "<b>By playlists</b>") press <b>OK</b>.</p> <p>Then confirm <b>OK</b> to save the modifications.</p> <ul style="list-style-type: none"> <li>- <b>By folders:</b> all folders containing audio files recognised on the peripheral device, in alphabetical order without following the folder structure.</li> <li>- <b>By artists:</b> all of the artist names defined in the ID3 Tags, in alphabetical order.</li> <li>- <b>By genres:</b> all of the genres defined in the ID3 Tags.</li> <li>- <b>By playlists:</b> if playlists have been saved.</li> </ul> 	 

## 04 AUDIO

### IPOD® or PORTABLE PLAYER



The audio files on a Mass Storage portable player\* can be heard through the vehicle's speakers by connecting it to the USB port (cable not supplied).



Management of the device is via the audio system controls.



If the portable player is not recognised by the USB port, connect it to the auxiliary Jack socket.



The Ipod® must be updated regularly for the best connection.



The playlists are those defined in the Ipod®.



The Ipod® must be generation 5 or later.

\* Check your player's manual.

# 04 AUDIO

## AUXILIARY SOCKET (AUX)

### AUXILIARY JACK SOCKET



The auxiliary Jack socket permits the connection of a portable non mass storage device or an iPod® if not recognised by the USB port.



Do not connect a device to the USB port and to the auxiliary Jack socket at the same time.

1

 
Connect the portable device to the auxiliary Jack socket using a suitable cable (not supplied).



2



Press the **SOURCE** button several times in succession and select "**AUX**".



3

First adjust the volume on your portable device.



4



Then adjust the volume of the audio system.



The display and management of controls is on the portable device.



# 04 AUDIO

## STREAMING - PLAYING AUDIO FILES VIA BLUETOOTH



Depending on the compatibility of the phone



Streaming allows music files on a telephone to be heard via the vehicle's speakers.  
The telephone must support the appropriate bluetooth profiles (Profiles A2DP/AVRCP).

1



Connect the telephone: see the "USING THE TELEPHONE" section.

2



Activate the streaming source by pressing **SOURCE**. Control of playback is via the audio system. The contextual information can be displayed on the screen.



In certain cases, playing of the audio files must be initiated from the telephone.



The audio quality depends on the quality of the transmission from the telephone.

## PLAY MODE



 
The play modes available are:

- Normal: the tracks are played in order, depending on the classification of the selected files.
- Random: the tracks in an album or folder are played in a random order.
- Random all: all of the tracks saved in the media are played in random order.
- Repeat: the tracks played are only those from the current album or folder.

1




Press **OK** for access to the contextual menu.  
or  
Press **MENU**.



2



 
Select "**Multimedia**" and confirm.



3



 
Select "**Media parameters**" and confirm.



4



 
Select "**Read mode**" and confirm.



5



 Select the desired play mode and confirm **OK** to save the modifications.



# 05 USING THE TELEPHONE

## PAIRING A TELEPHONE





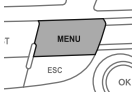







The services offered depend on the network, the SIM card and the compatibility of the Bluetooth telephone used.

Consult your telephone's manual and your operator to find out which services are available to you. A list of mobile telephones which offer the best range of services is available from the PEUGEOT dealer network.

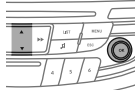

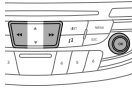For safety reasons and because they require prolonged attention on the part of the driver, the operations for pairing of the Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be carried out with the vehicle stationary and the ignition on.

<p>1</p> <p>Activate the telephone's Bluetooth function.</p>		<p>4</p>  <p>Select "<b>Search for a device</b>".</p>	
<p>2</p>  <p>Press <b>MENU</b>.</p>		<p>5</p> <p>A window is displayed "<b>Search in progress...</b>".</p>	
<p>3</p>   <p>Select "<b>Bluetooth connection</b>" and confirm.</p>		<p>6</p>  <p>Select the telephone to be connected from the list. Only one telephone can be connected at a time.</p>	

## 05 USING THE TELEPHONE




In some cases, the reference number of the telephone may appear instead of the name of the telephone.

7



A virtual keypad is displayed on the screen: enter a code with at least 4 digits and conform with **OK**.

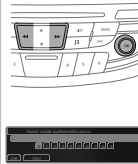

8

A message is displayed on the screen of the telephone: enter the same code and confirm.



If pairing fails, try again; the number of attempts is not limited.

9

Accept the connection to the telephone.

10

A message appears in the screen to confirm the result of the connection.




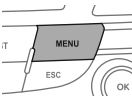

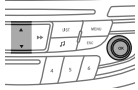

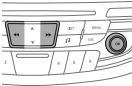



Pairing can also be initiated from the telephone by searching for detected Bluetooth devices.



The directory and the calls list can be accessed after the synchronisation period (if the telephone is compatible). Automatic connection must be configured in the telephone to allow the connection each time the vehicle is started.

# 05 USING THE TELEPHONE

## TELEPHONE STATUS

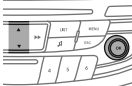
<p>1</p>  <p>To see the telephone status, press <b>MENU</b>.</p>		<p>4</p>  <p>Select "<b>Telephone status</b>" and confirm.</p>	
<p>2</p>  <p>Select "<b>Telephone</b>" and confirm.</p>		<p> The screen displays: the name of the telephone, the name of the network, network signal strength, confirmation of the Bluetooth connection and the streaming connection.</p>	
<p>3</p>  <p>Select "<b>Telephone management</b>" confirm.</p>			


# 05 USING THE TELEPHONE

  
## MANAGING CONNECTIONS


**i** The telephone connection automatically includes hands free operation and audio streaming.


**1**  Press **MENU**.





 
**2**  Select **"Bluetooth connection"** and confirm.





**3**  Select **"Connections management"** and confirm. The list of paired telephones is displayed.

 


  Indicates that a device is connected.

 Indicates connection of the audio streaming profile.

 
 Indicates connection of the hands-free profile.

**4**  Select a telephone and confirm.















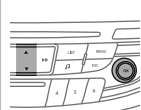
**5** Then select and confirm:

- **"Connect telephone"/"Disconnect telephone"**: to connect/disconnect the telephone or the hands-free connection only.
- **"Connect media player"/"Disconnect media player"**: to connect/disconnect only streaming.
- **"Connect telephone + media player"/"Disconnect telephone + media player"**: to connect/disconnect the telephone (hands-free and streaming).
- **"Delete connection"**: to delete the pairing.

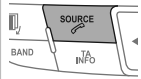


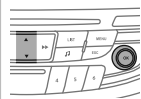


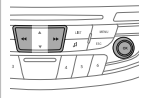


# 05 USING THE TELEPHONE

## MAKING A CALL - DIALLING
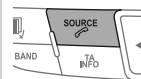
<p>1</p>  	<p>To display the "TELEPHONE" menu:</p> <ul style="list-style-type: none"> <li>- Make long press on <b>SOURCE</b>.</li> <li>- Or, press <b>OK</b> to display the contextual menu. Select "Call" and confirm.</li> <li>- Or, press <b>MENU</b>, select "Telephone" and confirm. Select "Call" and confirm.</li> </ul>	
<p>2</p>  	<p>Select "Dial" to enter a number and confirm.</p>	
<p>3</p>  	<p>Select numbers one at a time using the ◀ and ▶ buttons and confirm.</p>	
<p> Correction allows numbers to be deleted one at a time.</p>		
<p>4</p>  	<p>Select <b>OK</b> and confirm to start the call.</p>	

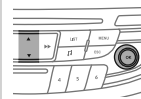
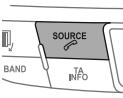

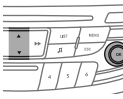


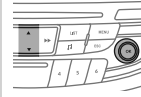



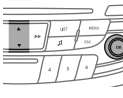
## MAKING A CALL - RECENTLY CALLED NUMBERS\*

<p>1</p>	<p>Repeat the previous step 1 to display the "TELEPHONE" menu.</p>	
<p>2</p>  	<p>Select "Calls list" and confirm.</p>	
<p>3</p>  	<p>Select the number and confirm to start the call.</p>	
<p><b>i</b> The calls list includes calls sent and received in the vehicle using the connected telephone.</p>		





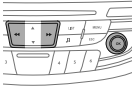
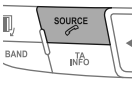


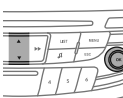


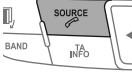
\* Depending on the compatibility of the telephone.

# 05 USING THE TELEPHONE
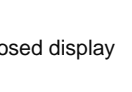
## MAKING A CALL - FROM THE DIRECTORY

<p><b>1</b></p>  <p>Repeat the previous step 1 to display the "TELEPHONE" menu.</p>	
<p><b>2</b></p>  <p>Select "Directory" and confirm.</p>	
<p><b>3</b></p>  <p>Select a contact then confirm.</p> <ul style="list-style-type: none"> <li> Home</li> <li> Business</li> <li> Mobile</li> </ul> <p>(depending on the information available in the contact records of the telephone connected).</p>	
<p><b>4</b></p>  <p>Select the number and confirm.</p>	

## RECEIVING A CALL

<p><b>1</b></p> <p>An incoming call is announced by a ring and a superimposed display in the multifunction screen.</p>	
<p><b>2</b></p>  <p>"YES" to accept the call is selected by default.</p> <p>Press <b>OK</b> to accept the call.</p> <p>Select <b>NO</b> and confirm to reject the call.</p> <p>or</p> <p>Press <b>SOURCE</b> to accept the call.</p>  	  
  <p>A long press on <b>ESC</b> or on <b>SOURCE</b> also rejects an incoming call.</p> 	 

# 05 USING THE TELEPHONE

## MANAGING CALLS

1



During a call, press **OK** to display the contextual menu.



2b

 
### Secret - Mute

(so that the caller cannot hear)



In the contextual menu:


- select "**Micro OFF**" to switch off the microphone.
- deselect "**Micro OFF**" to switch the microphone on.



2a Hang up



 In the contextual menu, select "**Hang up**" to end the call.



2c


### Combined mode

 (to leave the vehicle without ending the call)




In the contextual menu:

- select "**Telephone mode**" to transfer the call to the telephone.
- deselect "**Telephone mode**" to transfer the call to the vehicle.



 A long press on **SOURCE** or **TEL** also ends the call.



In certain cases, the combined mode has to be activated from the telephone.


If the contact has been cut off, when you reconnect on returning to the vehicle, the Bluetooth connection will be restored automatically (depending on the compatibility of the telephone).

# 05 USING THE TELEPHONE
 
## 2d Interactive voice response




From the contextual menu, select "**DTMF tones**" and confirm to use the digital keypad to navigate in the interactive voice response menu.



## 2e Consultation call



 From the contextual menu, select "**Switch**" and conform to return to a call left on hold.



# 05 USING THE TELEPHONE

## DIRECTORY



The telephone directory is sent to the system, depending on the compatibility of the telephone.  
The directory is provisional and depends on the Bluetooth connection.




Contacts imported from the telephone to the audio system directory are saved in a permanent directory visible to all, whatever the telephone connected.

1




Make a long press on **SOURCE** for access to the directory or press **OK**, and select **"Call"** and confirm.

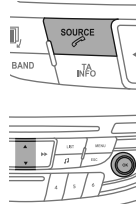

2



 Select **"Directory"** to see the list of contacts.




3



To modify the contacts saved in the system, press **MENU** then select **"Telephone"** and confirm.  
Select **"Directory management"** and confirm.


You can:

 - **"Consult an entry"**,
- **"Delete an entry"**,
- **"Delete all entries"**.




# 06 AUDIO SETTINGS


## SCREEN C

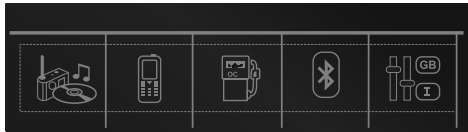

1



 Press  to display the audio settings menu.



2

 
The settings available are:

- Ambience,
- Bass,
- Treble,
- Loudness,
- Distribution: Personalised or Driver\*,
- Left/right balance,
- Fader (front/rear balance),
- Auto. volume.

3



Select and confirm "**Other settings...**" to display the next setting in the list..



The distribution, or spatialisation of sound, is an audio process which allows the sound quality to be improved according to the setting chosen, corresponding to the position of the listeners in the vehicle.


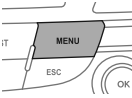



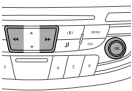

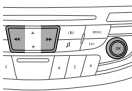

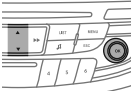

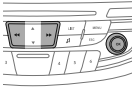


The Ambience, Treble and Bass audio settings are different and independent for each sound source.

# 07 CONFIGURATION

## SETTING THE DATE AND TIME

### SCREEN C

<p>1</p>  <p>Press the <b>MENU</b> button.</p>		<p>4</p>  <p>Using the arrows, select "<b>Date and time adjustment</b>" and confirm.</p>	
<p>2</p>  <p>Using the arrows, select "<b>Personalisation-configuration</b>" and confirm.</p>		<p>5</p>  <p>Select the setting to be modified. Confirm by pressing <b>OK</b>, then make the change and confirm again to save the modification.</p>	
<p>3</p>  <p>Using the arrows, select "<b>Display configuration</b>" and confirm.</p>		<p>6</p>  <p>Adjust the settings one by one, confirming by pressing the <b>OK</b> button. Next select the "<b>OK</b>" tab on the screen then confirm to exit from the "<b>Date and time adjustment</b>" menu.</p>	

## 08 TRIP COMPUTER



Each press of the button, located at the end of the wiper stalk, displays the different trip computer information in succession, depending on the screen.

- the "vehicle" tab with:
  - the range, the current fuel consumption and the distance remaining to the destination or the Stop & Start time counter,
- the "1" tab (trip 1) with:
  - the average speed, the average consumption and the distance travelled calculated over trip "1",
- the "2" tab (trip 2) with the same information for a second trip.



Zero reset

When the required trip is displayed, press the control for more than two seconds.



### A FEW DEFINITIONS

**Range:** displays the distance which can be travelled with the remaining fuel detected in the tank, based on the average fuel consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).

If, whilst driving, dashes are displayed continuously in place of the digits, contact a PEUGEOT dealer.

**Current fuel consumption:** only calculated and displayed above 20 mph (30 km/h).

**Average fuel consumption:** this is the average fuel consumption since the last trip computer zero reset.

**Distance travelled:** calculated since the last trip computer zero reset.

**Distance remaining to the destination:** calculated with reference to the final destination, entered by the user. If guidance is activated, the navigation system calculates it as a current value.

**Average speed:** this is the average speed calculated since the last trip computer zero reset (ignition on).

#### Stop & Start time counter

(minutes/seconds or hours/minutes)

If your vehicle is fitted with Stop & Start, a time counter calculates the time spent in STOP mode during a journey.

It resets to zero every time the ignition is switched on with the key.

# 09 SCREEN MENU MAP

## SCREEN C



### MAIN FUNCTION

1 OPTION A

2 Option A1

2 Option A2

1 OPTION B

### Multimedia

1 Media parameters

2 Choice of playback mode

3 Normal

3 Random

3 Random all

3 Repeat

2 Choice of track listing

3 By folders

3 By artists

3 By genres

3 By playlists

1 Radio parameters

### Telephone

1 Call

2 Dial

2 Directory

2 Calls list

2 Voice mail box

1 Directory management

2 Consult an entry

2 Delete an entry

2 Delete all entries

1 Telephone management

2 Telephone status

1 Hang up

# 09 SCREEN MENU MAP

## Trip computer

1 Vehicle diagnosis\*

## Bluetooth connection

1 Connections management

1 Search for a device

## Personalisation- Configuration

1 Choice of language

1 Display configuration

2 Choice of units

2 Date and time adjustment

2 Display parameters

2 Brightness

\* The parameters vary according to the vehicle.

# FREQUENTLY ASKED QUESTIONS

The following tables contain answers to the most frequently asked questions.

QUESTION	ANSWER	SOLUTION
<p>There is a difference in sound quality between the different audio sources (radio, CD...).</p>	<p>For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).</p>	<p>Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Fader, Left-Right Balance) to the middle position, select the musical ambience "None" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.</p>
<p>When changing the settings for treble and bass, the ambience setting is deselected. When changing the ambience setting, treble and bass are reset to zero.</p>	<p>Choosing an ambience imposes settings for treble and bass. Modifying one without the other is not possible.</p>	<p>Modify the treble and bass settings or the ambience setting to obtain the desired sound quality.</p>
<p>When changing the balance setting, distribution is deselected.</p>	<p>Choosing a distribution setting imposes a balance setting. Modifying one without the other is not possible.</p>	<p>Modify the balance setting or the distribution setting to obtain the desired sound quality.</p>

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 MHz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
The traffic announcement (TA) is displayed. I do not receive any traffic information.	The radio station does not broadcast traffic information.	Tune to a radio station which broadcasts traffic information.
The stored stations are not found (no sound, 87.5 MHz is displayed...).	An incorrect waveband is selected.	Press the BAND AST button to return to the waveband (AM, FM1, FM2, DAB*) on which the stations are stored.

\* Digital Audio Broadcasting.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.	<ul style="list-style-type: none"> <li>- Check that the CD is inserted in the player the right way up.</li> <li>- Check the condition of the CD: the CD cannot be played if it is too damaged.</li> <li>- Check the content in the case of a recorded CD: consult the advice in the "Audio" section.</li> <li>- The audio equipment's CD player does not play DVDs.</li> <li>- Due to their quality level, certain writeable CDs will not be played by the audio system.</li> </ul>
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio settings (bass, treble, ambience) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.
The Bluetooth connection is cut.	The battery of the peripheral may not be sufficiently charged.	Recharge the battery of the peripheral device.
The message "USB device error" is displayed on the screen.	The USB memory stick is not recognised. The memory stick may be corrupt.	Reformat the memory stick.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
A telephone connects automatically, disconnecting another telephone.	Automatic connection overrides manual connection.	Modify the telephone settings to remove automatic connection.
An iPod is not recognised when connecting to the USB port.	The iPod is of a generation that is not compatible with the USB.	Connect the iPod to the AUX Jack socket using a suitable cable (not supplied).
The hard disk or device is not recognised when connecting to the USB port.	Some hard disks and devices need a power supply greater than is provided by the audio system.	Connect the device to the 230 V socket, the 12 V socket or an external power supply. <b>Caution:</b> ensure that the device does not transmit a voltage greater than 5 V (risk of destruction of the system).
When streaming, the sound cuts momentarily.	Some telephones prioritise connection of the "hands-free" profile.	Delete the "hands-free" connection profile to improve streaming.
In "Random all" play, not all of the tracks are played.	In "Random all" play, the system can only take into account up to 999 tracks.	
With the engine off, the audio system switches off after a few minutes of use.	When the engine is switched off, the audio system operating time depends on the battery charge. The switch-off is normal: the audio system switches to economy mode and switches off to prevent discharging the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio system switches to an automatic thermal protection mode leading to a reduction of the volume or stopping of the playing of the CD.	Switch the audio system off for a few minutes to allow the system to cool.